

10KM16/24 Receiver Supplement for 3-Speed *telePendant*™ Transmitters

Programming the *telePendant* for use with a 10KM16/24 Receiver.

Your system comes preprogrammed and programming should be unnecessary. However, if you do wish to program the unit the following steps are needed.

Step 1. Familiarize your self with the use of the PDA in programming the *telePendant* transmitter by reading the programming section of the *telePendant* manual.

Step 2. using the PDA select “Tx Type” “3 SPD 10K Pendant”.

Step 3. Select the appropriate Bank.

Step 4. Input Frequency code.
(Usually found marked inside the receiver door).

Step 5. Input Receiver Access Code.
(Usually found marked inside the receiver door).

Step 6. Tap the arrow and select “Motor 3” for the 10KM16 or “Motor 5” for the 10KM24.

Step 7. Tap “Save” and load program into the *telePendant*.

telePilot Programmer

Tx Type ▼ 3 SPD 10K Pendant

Use bank password

First press ▼ Button 6

Second press ▼ Button 5

Third press ▼ Button 4

Fourth press ▼ Button 3

Bank 1	Bank 2	Bank 3	Bank 4
off	off	off	off

Name: M

Setup Bank #

System ▼ 10K Freq ▼ AK01

A1	1	B1	1
0	0	0	0

Receiver access code


Multibox Rx Settings

Timer ▼ 15

Motor ▼ 3


Save
Cancel

10K16M - 3-SPEED, 3 MOTOR STANDARD CONFIGURATION

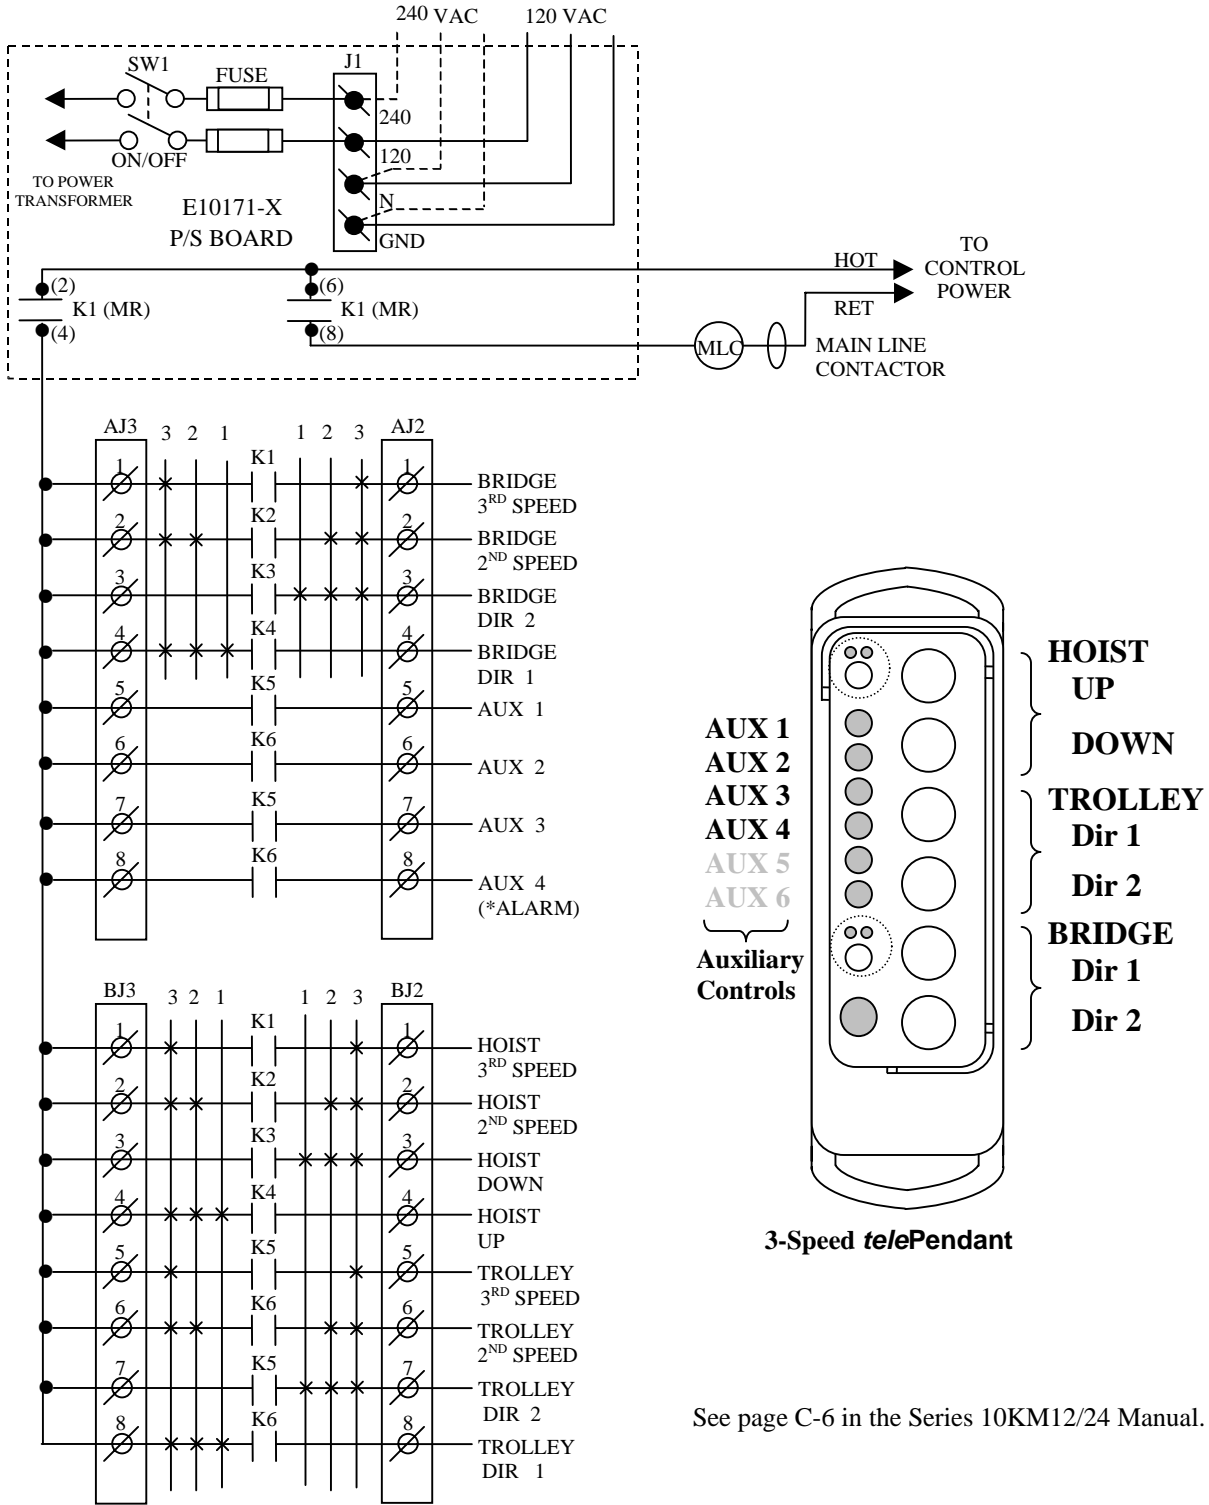

See page C-6 in the Series 10KM12/24 Manual.

10K24M - 3-SPEED, 5 MOTOR STANDARD CONFIGURATION

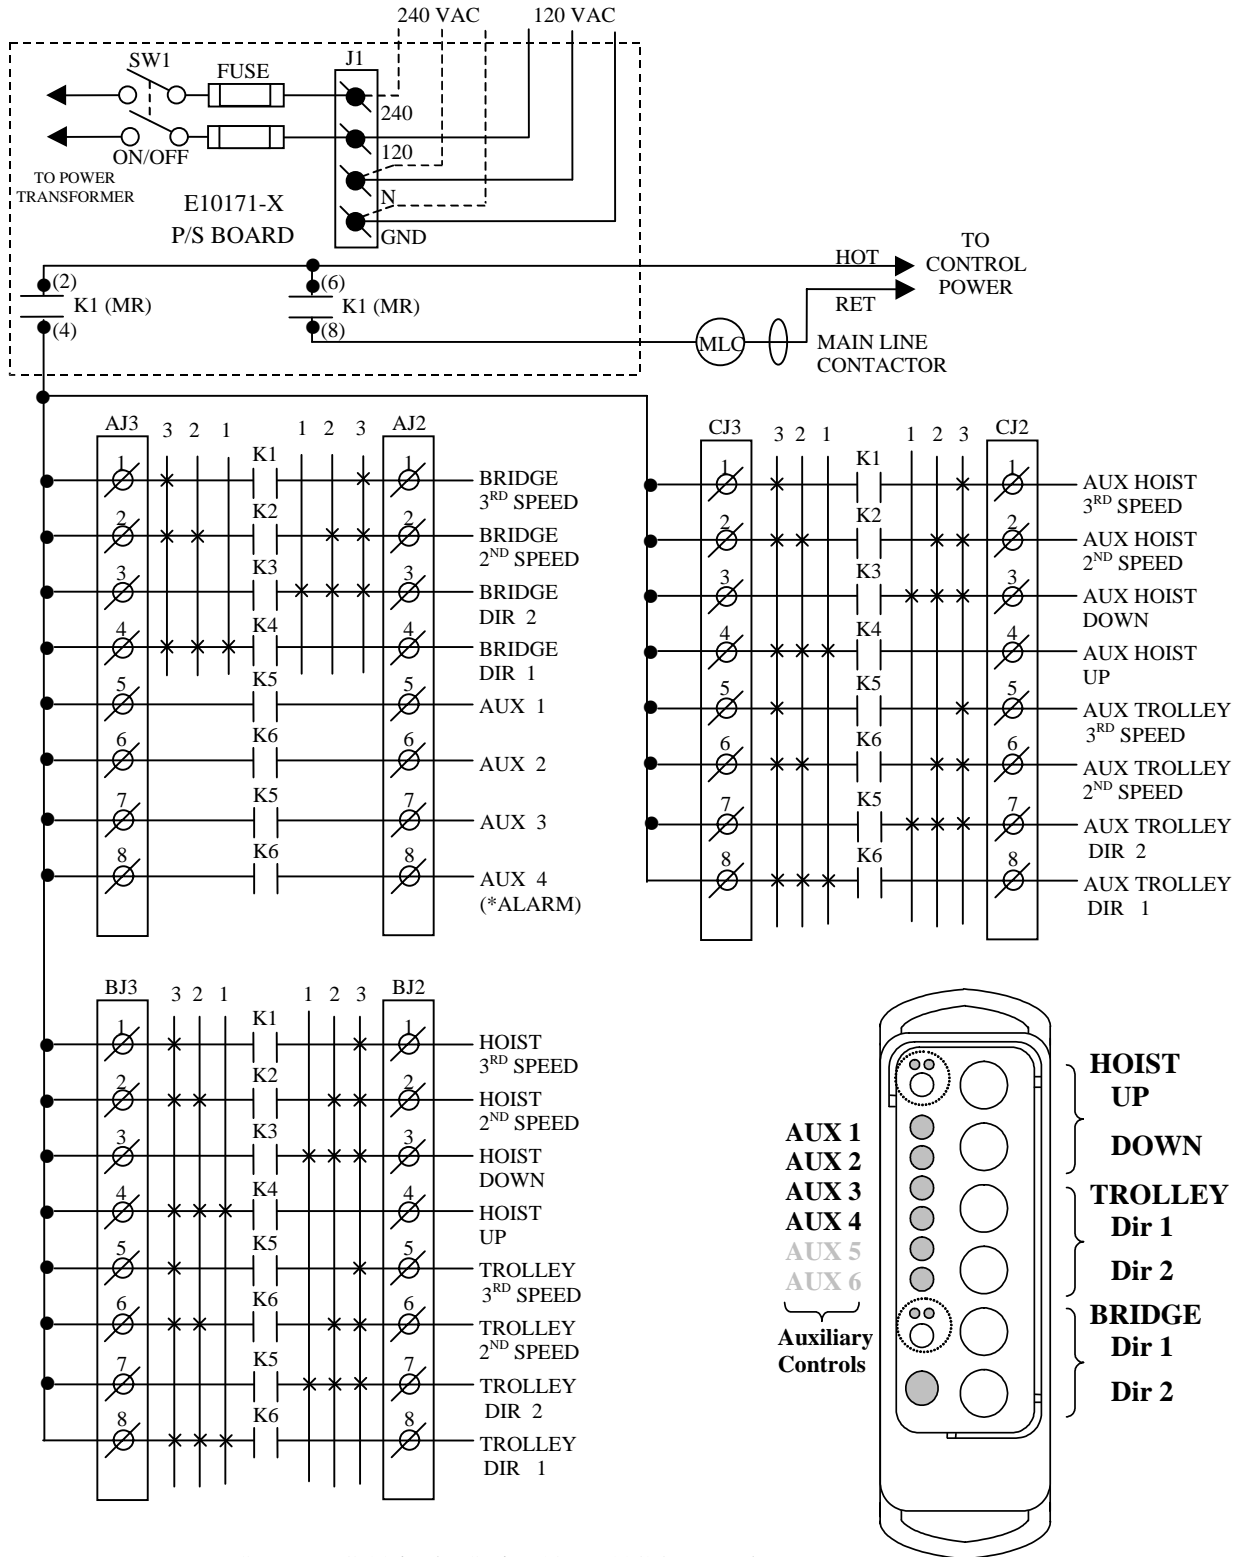

See page C-22 in the Series 10KM12/24 Manual.

3-Speed telePendant