
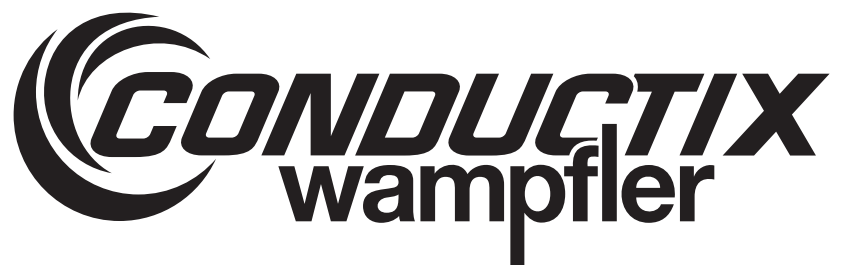


Spring Cable Reel Manual

1900/2400 Power Reel[®]

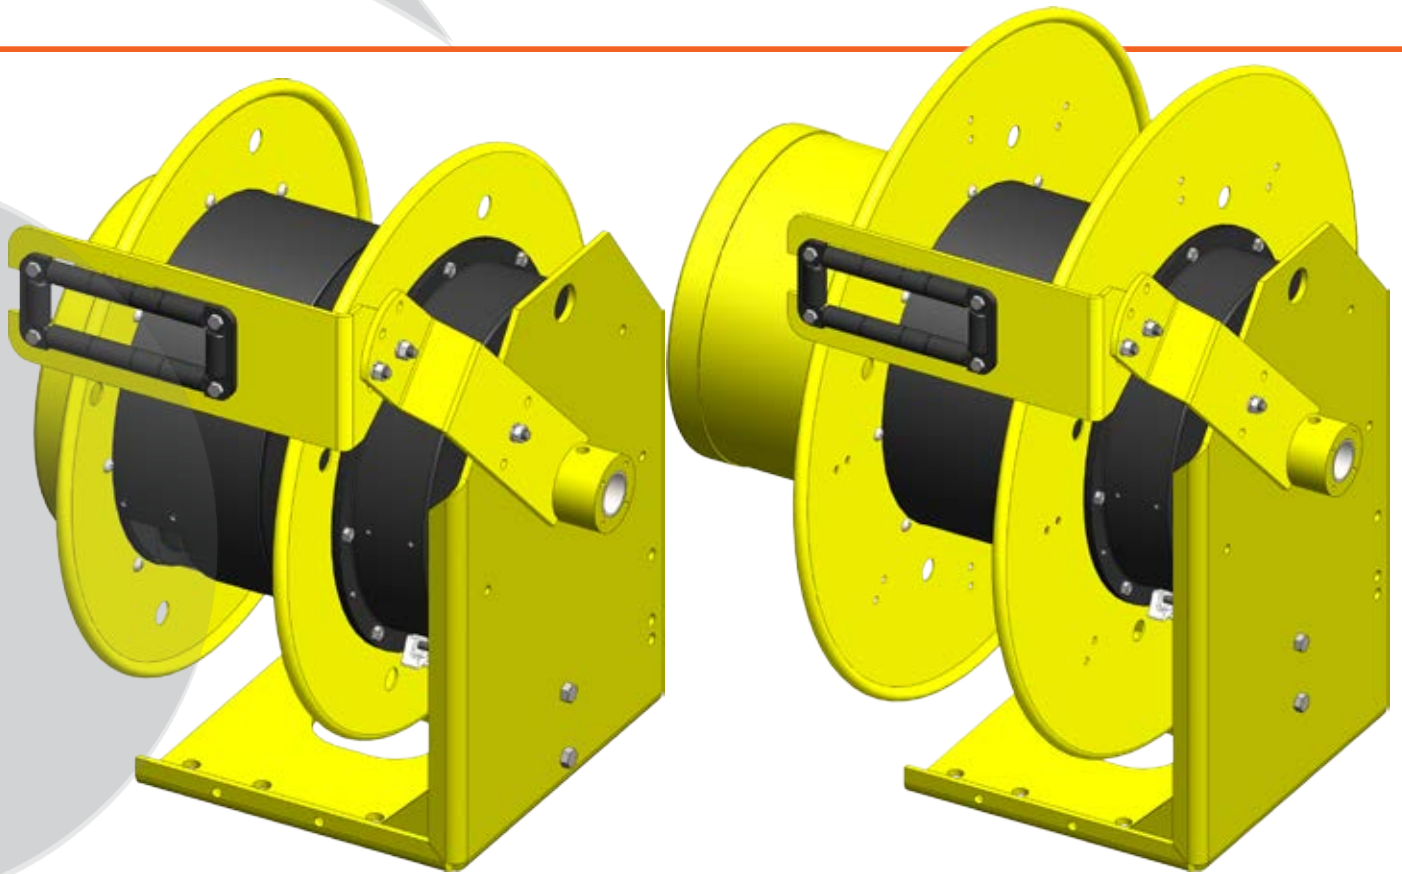

CONDUCTIX INCORPORATED

The technical data and images which appear in this manual are for informational purposes only. **NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE CREATED BY THE DESCRIPTIONS AND DEPICTIONS OF THE PRODUCTS SHOWN IN THIS MANUAL.** Conductix makes no warranty (and assumes no liability) as to function of equipment or operation of systems built according to customer design or of the ability of any of its products to interface, operate or function with any portions of customer systems not provided by Conductix.

Seller agrees to repair or exchange the goods sold hereunder necessitated by reason of defective workmanship and material discovered and reported to Seller within one year after shipment of such goods to Buyer.

Except where the nature of the defect is such that it is appropriate, in Seller's judgment, to effect repairs on site, Seller's obligation hereunder to remedy defects shall be limited to repairing or replacing (at Seller's option) FOB point of original shipment by Seller, any part returned to Seller at the risk and cost of Buyer. Defective parts replaced by Seller shall become the property of Seller.

Seller shall only be obligated to make such repair or replacement if the goods have been used by Buyer only in service recommended by Seller and altered only as authorized by Seller. Seller is not responsible for defects which arise from improper installation, neglect, or improper use or from normal wear and tear.

Additionally, Seller's obligation shall be limited by the manufacturer's warranty (and is not further warranted by Seller) for all parts procured from others according to published data, specifications or performance information not designed by or for Seller.

Seller further agrees to replace or at Seller's option to provide a refund of the sales price of any goods that do not conform to applicable specifications or which differ from that agreed to be supplied which non-conformity is discovered and forthwith reported to Seller within thirty (30) days after shipment to the Buyer. Seller's obligation to replace or refund the purchase price for non-conforming goods shall arise once Buyer returns such goods FOB point of original shipment by Seller at the risk and cost of Buyer. Goods replaced by Seller shall become the property of Seller.

There is no guarantee or warranty as to anything made or sold by Seller, or any services performed, except as to title and freedom from encumbrances and, except as herein expressly stated and particularly, and without limiting the foregoing, **there is no guarantee or warranty, express or implied, of merchantability or of fitness for any particular purpose or against claim of infringement or the like.**

Seller makes no warranty (and assumes no liability) as to function of equipment or operation of systems built to Buyer's design or of the ability of any goods to interface, operate or function with any portions of Buyer's system not provided by Seller.

Seller's liability on any claim, whether in contract, tort (including negligence), or otherwise, for any loss or damage arising out of, connected with, or resulting from the manufacture, sale, delivery, resale, repair, replacement or use of any products or services shall in no case exceed the price paid for the product or services or any part thereof which give rise to the claim. In no event shall Seller be liable for consequential, special, incidental or other damages, nor shall Seller be liable in respect of personal injury or damage to property not the subject matter hereof unless attributable to gross misconduct of Seller, which shall mean an act or omission by Seller demonstrating reckless disregard of the foreseeable consequences thereof.

Seller is not responsible for incorrect choice of models or where products are used in excess of their rated and recommended capacities and design functions or under abnormal conditions. Seller assumes no liability for loss of time, damage or injuries to property or persons resulting from the use of Seller's products. Buyer shall hold Seller harmless from all liability, claims, suits, and expenses in connection with loss or damage resulting from operation of products or utilization of services, respectively, of Seller and shall defend any suit or action which might arise there from in Buyer's name - provided that Seller shall have the right to elect to defend any such suit or action for the account of Buyer. The foregoing shall be the exclusive remedies of the Buyer and all persons and entities claiming through the Buyer.

TABLE OF CONTENTS

SECTION 1 - SAFETY	5
Safety Information Responsibility	5
Safety Messages	5
Electrical Warnings	6
Operational Warnings	6
Maintenance Warnings	6
Specifications & Listings (CSA)	6
Electrical Rating	6
Reels Not Equipped With Cable	6
Labels & Marking	7
Reels equipped with cable:	7
Reels not equipped with cable:	7
Allowable Ampacities for Flexible Cord & Cable	7
SECTION 2 - OVERVIEW	9
SECTION 3 - INSTALLATION	10
Application Types	10
Stretch Applications (Automatic)	10
Lift Applications (Extension or Automatic)	10
Drag Applications (Extension)	10
Retrieve Applications (Automatic)	10
Mounting	10
Standard Mounting	10
Pivot Base Mounting	11
Guide Rails	11
Guide Rail Installation	11
Roller Guides	12
Ratchet	12
Ratchet Option Installation	13
Ratchet Pawl Installation	13
Ratchet Plate Installation	13
Spool Lock	14
Spool Lock Installation	14
Cable Installation & Replacement	15
Cable Removal	15
Cable Installation	15
Cable Connections	15
Cable Loading	15
Slip Ring Replacement	16

TABLE OF CONTENTS

Electrical Connections	17
Electrical Warning	17
Spool Cable Connections	17
Supply Cable Connections	17
Reels without Junction Boxes	17
Reels with Junction Boxes	17
Spring Tension Adjustment	18
Spring Tension Warnings	18
Spring Cycling	18
Spring Pre-Tensioning	18
Adjusting Spring Tension	18
SECTION 4 - OPERATION	19
SECTION 5 - MAINTENANCE	20
Maintenance Warnings	20
Lubrication	20
Inspections	20
Spring Motor Replacement	21
SECTION 6 - REPLACEMENT PARTS	22
R Series Slip Rings for 1900 & 2400 Series	22
Reel Part Description	23
Power Reel Part Descriptions	24
GafferReel Part Descriptions (Theatre)	25
SECTION 7 - TROUBLESHOOTING	26

SECTION 1 - SAFETY

Safety Information Responsibility

All owner, operator, and maintenance personnel must read and understand all manuals associated with this product before installation, operation, or maintenance.

The manual provides information on the recommended installation, operation, and maintenance of this product. Failure to read and follow the information provided could cause harm to yourself or others and/or cause product damage. No one should install, operate, or attempt maintenance of this product prior to familiarizing themselves with the information in this manual.

Safety Messages

The following safety messages are used in this manual to alert you to specific and important safety related information.



CAUTION

- CAUTION indicates unsafe actions or situations that have the potential to cause injury, and/or minor equipment or property damage.



DANGER

- DANGER indicates hazards that have the potential to cause severe personal injury or death.



WARNING

- WARNING indicates unsafe actions or situations that have the potential to cause severe injury, death, and/or major equipment or property damage.

NOTE

- NOTE is used to alert you to installation, operation, programming, or maintenance information that is important, but not hazard related.

SECTION 1 - SAFETY

Electrical Warnings

This equipment should be properly grounded before use, in accordance with both the National Electric Code and local codes and ordinances.

The electrical power should be disconnected from the cable reel before any service functions are performed.

This cable reel must not be used for loads greater than the voltage and current rating of the cable. The ampacity rating of the cable reel shall be in accordance with the National Electric Code.1.2.1

Operational Warnings

Exercise care when handling the cable reel during normal operation. This cable reel has a rotating spool powered by springs under tension.

Do not use cable different from that for which the reel is intended. Changes in diameter, weight per foot, length of cable or flexibility will affect the operation of the reel.

Mounting hardware and fasteners should be installed to maintain tightness under vibration and checked periodically to assure tightness.

Overhead installation mountings should be such that the reel is not supported by bolts in tension. A safety chain or cable is strongly recommended to minimize damage and/or possible injury in the event of mounting failure.

Maintenance Warnings

WARNING: Modification of this equipment may cause excessive wear and will void the warranty. Contact the manufacturer regarding changes or modifications of equipment which could affect reliability or safety.

DO NOT DISASSEMBLE THE SPRING MOTOR FOR ANY REASON. Serious personal injury could result. This cable reel is equipped with springs under tension. Contact the factory for assistance.

In the US call: 1 800-521-4888

In the Canada call: 1 800-667-2487

Specifications & Listings (CSA)

The following specifications apply to standard 1900 & 2400 Series Cable PowerReels:

1900 & 2400 Series Cable Reels are intended for commercial / industrial use and are provided with a permanent mounting base.

1900 & 2400 Series Cable Reels are built to NEMA 4 Specifications and are suitable for indoor/outdoor use.

Spring Motors for the 1900 & 2400 Series are sealed for safety and weather-tight for long-life.

Ampere capacity of the 1900 & 2400 Series Reels range from 6.5 to 150 Amperes and from 250 to 600 Volt maximum. Reels are available in 2 to 30 conductor configuration.

1900 & 2400 Series Cable Reels are available with optional features which increase safety, enhance performance, and improve serviceability. Options include: ratchet, pivot base, spool lock, junction box, and guide rails.

Custom power and signal circuit slip rings using silver plated slip rings and silver graphite brushes are available on request.

Electrical Rating

Reels Not Equipped With Cable

Reels not equipped with flexible cable are rated in Amperes and volts. Consult the tables on the following pages for appropriate cable/conductor combinations.

The amp and voltage rating of the cable should not be greater than the slip ring circuit. See Slip Ring Replacement Chart and consult the tables on the following pages for appropriate cable/conductor combinations.

Reels Equipped With Cable

Reels equipped with flexible cable should not be used at voltages and/or amperages above the rating of the reel or the cable.

SECTION 1 - SAFETY

Labels & Marking

Every cable reel is marked with a label on the frame which includes the Conductix name and logo, the product catalog number and the individual product serial number.

Reels equipped with cable:

The marking on reels equipped with a flexible cable shall include the current and voltage ratings.

Reels not equipped with cable:

The rating of the reel not equipped with cable is completed upon installation and is based on the wire size and number of conductors. See Tables below. The marking shall include the following:

- * The type (SOW, W, G-GC, etc.),
- * The AWG cable size,
- * The maximum length of cable with which the reel is intended for use.

The maximum amperage and voltage rating for cable reels supplied without cable is on the Conductix Identification label. Actual rating is determined by the installed cable, wire size and number of conductors, and is not to exceed the indicated maximum rating of the slip ring.

The cable reel is designed to handle cable with a temperature rating of up to 90° C, which is marked on the cable.

Allowable Ampacities for Flexible Cord & Cable

Type W (90°C)							
Cable	Ampacity	Cable	Ampacity	Cable	Ampacity	Cable	Ampacity
W 8/2	50	W 6/2	65	W 4/2	90	W 2/2	120
W 8/3	50	W 6/3	65	W 4/3	85	W2/3	115
W 8/4	45	W6/4	55	W 4/4	75	W2/4	100
						W 1/2	140

Table 7-1

Type G-GC(90°C)	
Cable	Ampacity
8/3 G-GC	50
6/3 G-GC	65
4/3 G-GC	85
2/3 G-GC	115

Table 7-2

G-GC Cable Color Code Chart		
Cond. No.	Base Color	Tracer Color
1	Green	-
2	Green	-
3	Yellow	-
4	Black	-
5	White	-
6	Red	-

Table 7-3

SECTION 1 - SAFETY

Allowable Ampacities for Flexible Cord & Cable


Type SOW-A, SOOW-A (90° C)							
Cable	Ampacity	Cable	Ampacity	Cable	Ampacity	Cable	Ampacity
16/2	13	14/2	15	12/2	20	10/2	25
16/3	10	14/3	15	12/3	20	10/3	25
16/4	8	14/4	12	12/4	16	10/4	20
16/5	8	14/5	12	12/5	16	10/5	20
16/6	8	14/6	12	12/6	16	10/6	20
16/7	7	14/7	10.5	12/7	14	10/7	17.5
16/8	7	14/8	10.5	12/8	14	10/8	17.5
16/10	7	14/10	10.5	12/10	14	10/10	17.5
16/12	7	14/12	10.5	12/12	14	10/12	17.5
16/14	7	14/14	10.5	12/14	14	10/14	17.5
16/16	7	14/16	10.5	12/16	14	10/16	17.5
16/20	7	14/20	10.5	12/20	14	10/20	17.5
16/24	6	14/24	10.5	12/24	14	-	-
16/30	6	14/30	9	12/30	12	-	-

Table 8-1

Color Code Chart								
Conductor No.	Base Color	Tracer Color	Conductor No.	Base Color	Tracer Color	Conductor No.	Base Color	Trace Color
1	Green	-	11	Blue Black	Black	21	Orange	Green
2	Black	-	12	Black	White	22	Black	-
3	White	-	13	Red	White	23	White	-
4	Red	-	14	Green	White	24	Red	-
5	Orange	-	15	Blue	White	25	Green	-
6	Blue	-	16	Black	Red	26	Orange	-
7	White	Black	17	White	Red	27	Blue	-
8	Red	Black	18	Orange	Red	28	White	Black
9	Green	Black	19	Blue	Red	29	Red	Black
10	Orange	Black	20	Red	Green	30	Green	Black

Table 8-1

SECTION 2 - OVERVIEW

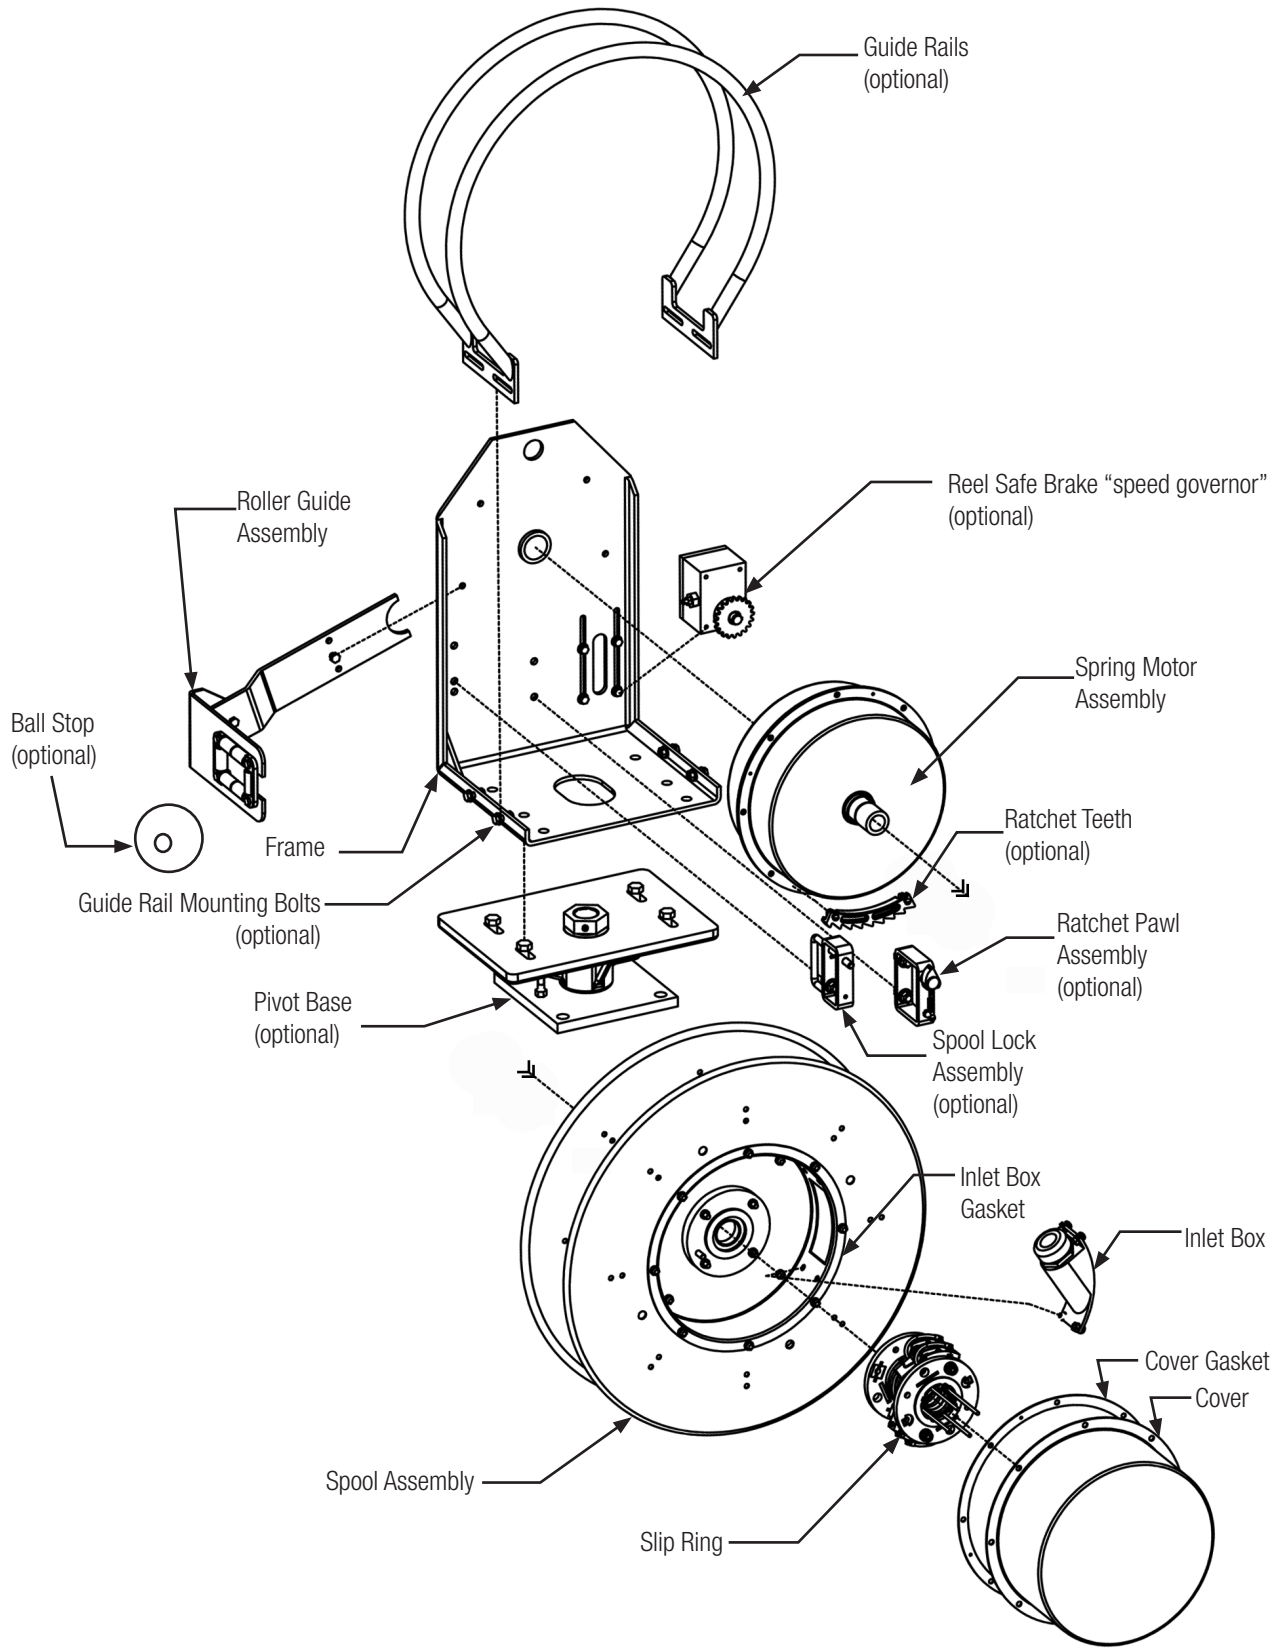

SECTION 3 - INSTALLATION

Application Types

Stretch Applications (Automatic)

The cable is suspended without any intermediate support. Stretch reels generally require a line pull equal to two times the weight of the cable, which allows approximately 10% sag at full extension. On long applications where sag cannot be tolerated, it is sometimes desirable to put supports at intervals of 5 to 10 feet. See **Figure 10-1**.

Lift Applications (Extension or Automatic)

The cable is lifted vertically in lift applications. The reel is normally designed to handle only the total weight of the cable. Some lift applications may require a ball stop and ratchet to control the length of cable to be retracted. All standard 1900/2400 Series lift reels sold with cable have a ball stop and ratchet installed on the reel. See **Figure 10-2**.

Drag Applications (Extension or Automatic)

The reel is mounted on a stationary object and is required to drag the cable over the surface to the reel. The cable is supported by the ground or some type of cable tray. A ball stop is required. All standard 1900/2400 Series drag reels sold with cable have a ball stop and ratchet installed on the reel. See **Figure 10-3**.

Retrieve Applications (Automatic)

The reel is mounted on the moving object and winds up or pays out the cable as the machine approaches or moves away from the fixed end. Retrieve applications can be elevated up to 4 feet from the cable support surface. See **Figure 10-4**.

Mounting

Standard Mounting

Mount the base of the reel to any flat surface. The surface must be strong enough to support the reel and the forces of winding and unwinding the cable.

1. The spool drum must be mounted horizontally.
2. The cable should extend perpendicular to the rotation of the spool. The total cable deflection should not exceed 15° to either side of the center line of the spool. See **Figure 10-5**.
3. If deflection is constant to either side of the reel and operation is impaired, re-mount the reel.
4. If the angle of deflection exceeds 30° , a Pivot Base or two way payout guide should be used, otherwise excessive cable wear and unreliable operation will result.
5. A safety chain is recommended for all overhead installations. Attach the safety chain using the 0.39" hole provided in the base.

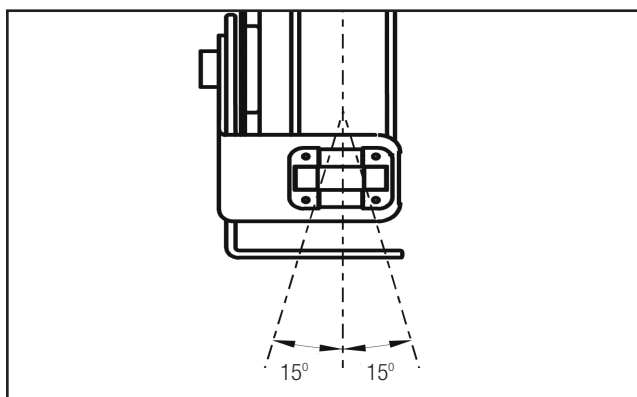


Figure 10-5 Cable Deflection with Roller Guide

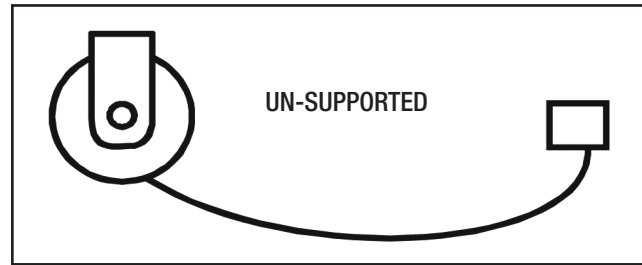


Figure 10-1

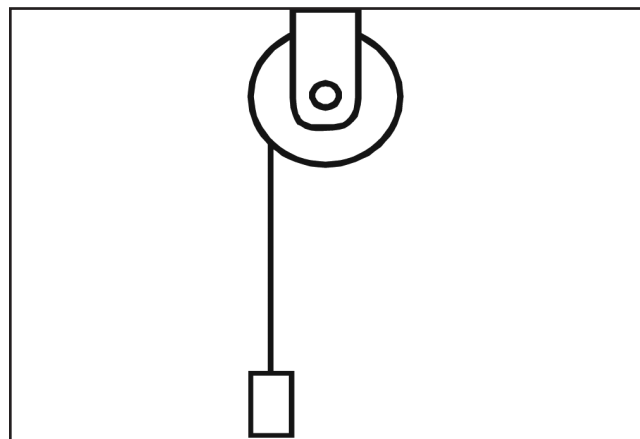


Figure 10-2

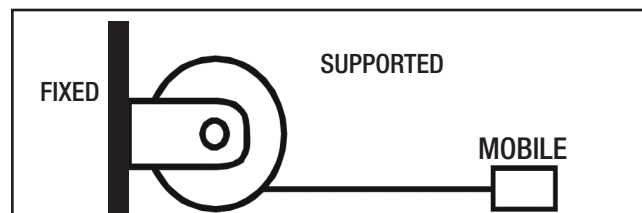


Figure 10-3



Figure 10-4

SECTION 3 - INSTALLATION

Pivot Base Mounting

All 1900 & 2400 Series Cable Reels can be furnished with a pivot base to allow the reel to rotate and keep the extended cable perpendicular to the application. See **Figure 11-1**.

Pivot Bases rotate up to 345°. If 360° rotation is required contact the factory.

A pivot base is required in carousel or loop-track applications.

When a pivot base is used the reel must be mounted horizontally ("ceiling" or "floor" mounted).

The Roller Guide should be mounted so that the cable will travel perpendicular to the axis of pivot base rotation. This will guard against cable twisting and ensure effective swivel action from the pivot base.

Mount Pivot Base in the position that best centers the spool over the pivot axis.

Guide Rails

The optional guide rails can be installed on any of the 1900 & 2400 Series Cable Reels.

Guide Rails provide a barrier between the cable and the rotating spool flange rim. They also act as a safety barrier for installations where human contact with the rotating spool flange is likely to occur.

Guide Rails provide additional assurance that the cable will wrap efficiently on the spool for applications involving rigorous motion.

Guide Rails can act as a substitute for the roller guide in applications that require a two-way pay-out.

Guide Rail Installation

1. Guide Rails are mounted to the base using the same bolts that mount the reel.

NOTE

- Later versions may have guide rail mounted on sides of base.

2. Mount Rails as shown.

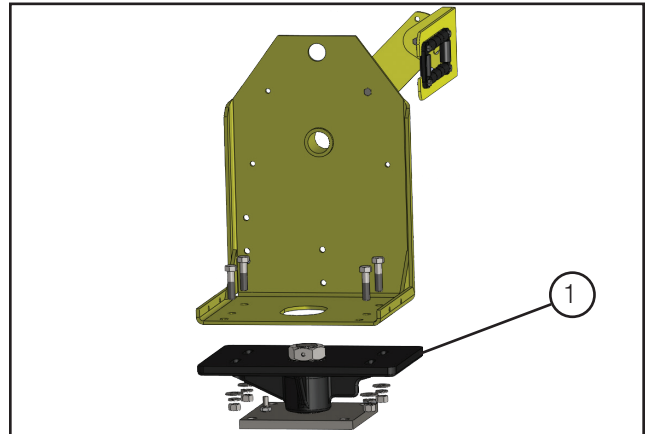


Figure 11-1 1. Universal Pivot Base

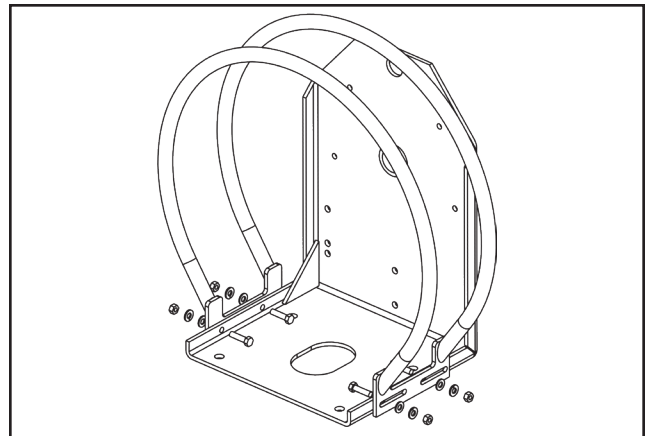


Figure 11-2 Guide Rail Mounting

SECTION 3 - INSTALLATION

Roller Guides

All 1900 & 2400 Series Cable Reels are equipped with an adjustable roller guide. The guide's function is to center the cable on the spool and to help the reel wrap cable more evenly.

Level winding is inhibited by the cable bearing against either of the spool flanges during operation. The Roller Guide helps to alleviate this condition.

The guide consists of two elements: the guide arm and the guide head. The guide must be adjusted and secured prior to terminating any electrical connections. See **Figure 12-1**.

1. The guide should be secured at the position that causes the least change of cable direction to occur at the guide; otherwise, cable life will be reduced.
2. Mount the guide arm to the base by positioning the open end of the arm against the groove between the shaft coupling and the frame. Secure the guide arm using the provided 5/16-18 hex head cap screw, spring-type lock washer, and 5/16-18 hex nut. There are four holes in the frame and three holes in the arm to provide a total of 12 twelve possible mounting positions.
3. The guide head may be adjusted freely through 60° degrees for applications that require precise alignment.
4. Attach the guide head to the end of the guide arm using the provided hardware.
5. Cable can be released for maintenance by removing the rollers on the Guide Head without disconnecting the cable.

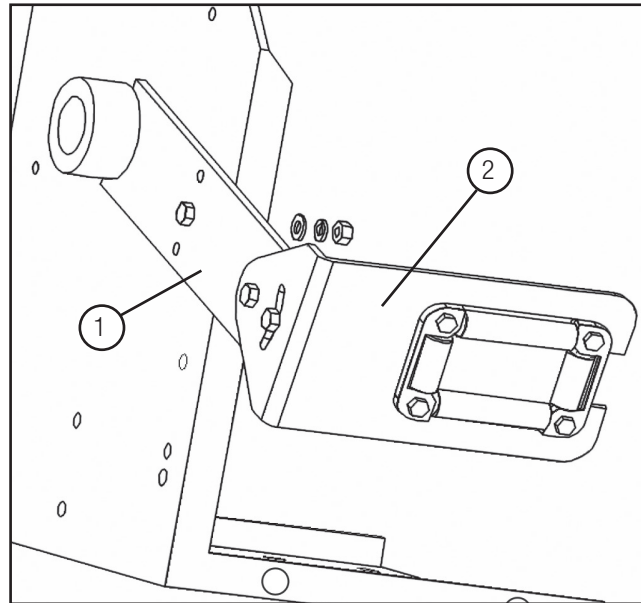


Figure 12-1 1. Guide Arm
2. Guide Head

Ratchet

The ratchet option allows the extended cable to be pulled out and held from retraction by spring tension; generally appropriate for operator attended applications. See **Figure 12-2**.

The ratchet for the 1900 & 2400 Series Cable Reels is spring loaded. It is designed to function in all acceptable mounting configurations.

The ratchet option can be installed at the time of purchase or later added to reels that have already been introduced to service.

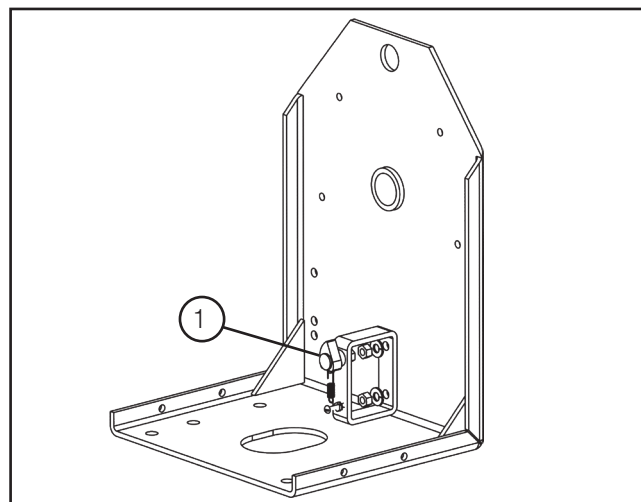


Figure 12-2 1. Ratchet

SECTION 3 - INSTALLATION

Ratchet Option Installation

WARNING

- Power should be disconnected from the reel before beginning any service or maintenance functions. Follow lock-out/tag-out procedures appropriate to the installation.

Ratchet Pawl Installation

The ratchet pawl assembly is attached to the reel frame as a unit. The holes provided for the attachment of The ratchet pawl assembly are located in the lower middle area of the frame.

1. Insert the two provided 3/8-16x1" bolts in the frame. See **Figure 13-1**.
2. Position the ratchet pawl assembly over the protruding bolt shafts.
3. Secure using the two provided sets of 3/8-16 hex nuts & lock washers.

Ratchet Plate Installation

The cable must be extended far enough to allow the removal of the two spring-side flange bolts that are aligned with the cable entrance (see item 1 in the figure below).

1. Substitute the provided longer flange bolts and nuts for the removed bolts and nuts.
2. Position the ratchet plate over the bolts on the outside of the spring-side flange. When viewed from the frame, the square tooth of the ratchet plate should be to the left-hand side.
3. Secure the ratchet plate to the spool by tightening the nuts to approximately 7 ft-lbs.
4. Additional ratchet plates may be installed but will increase the likelihood of spool lock-up at full cable extension.

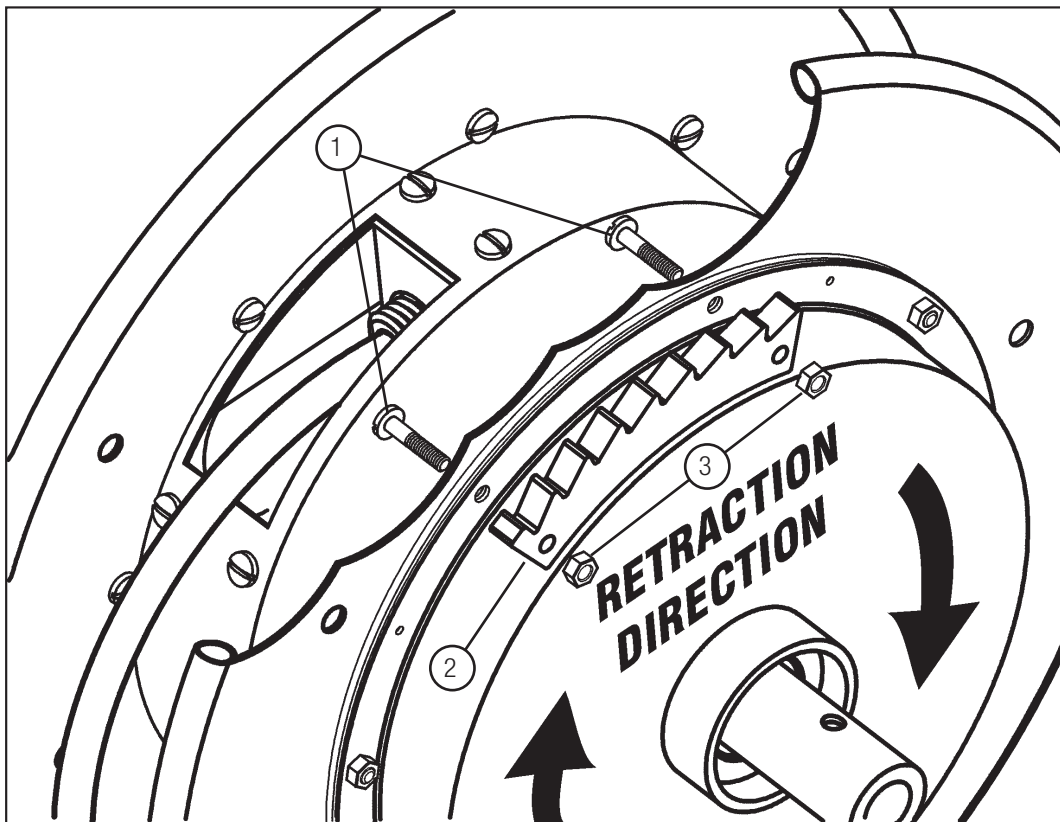


Figure 13-1

1. 3/8-16x1" Bolts
2. Ratchet Paw Assembly
3. 3/8-16 Hex Nuts

SECTION 3 - INSTALLATION

Spool Lock

All 1900 & 2400 Series Cable Reels can be equipped with an optional Spool Lock. See **Figure 14-1**.

The Spool Lock allows the power spring tension to be locked out from the cable spool. Applications that often require cable replacement would benefit from the addition of the Spool Lock.

The spring-loaded design of the Spool Lock maintains engagement under conditions of shock and vibration. This is good for applications which require the cable to remain extended and are subject to severe service conditions.

Spool Lock Installation

1. Attach the spool lock riser with 3/8-16 x 3/4 bolt finger tight.
2. Insert the lock into the hole in the frame and the first riser hole. Place the spring on the lock shaft before it goes through the second riser hole. See **Figure 14-1**.
3. Hold the spring back and insert a roll pin to keep the spring in position. Use the provided insert tool to center the roll pin through the shaft.
4. Tighten the mounting bolt.

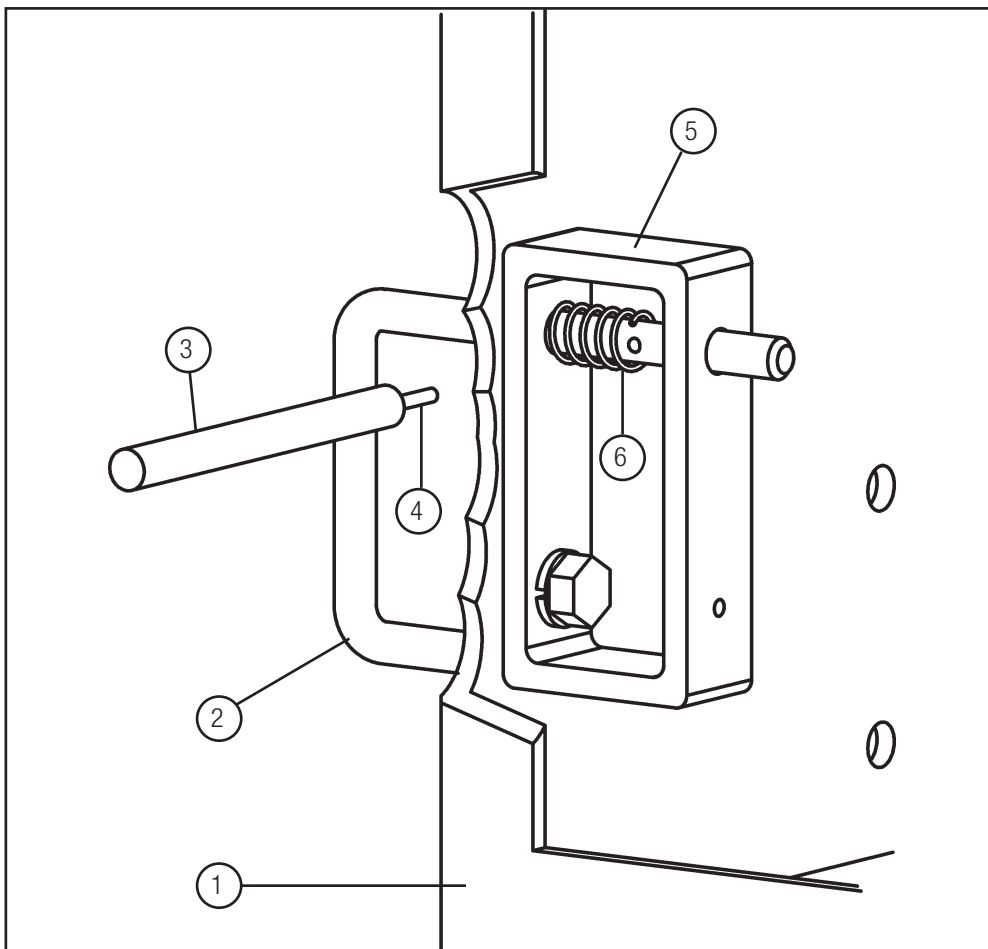


Figure 14-1

1. Base
2. Spool Lock Shaft
3. Roll Pin Insert Tool
4. Roll Pin
5. Riser
6. Spring

SECTION 3 - INSTALLATION

Cable Installation & Replacement

Cable Removal

If an existing cable is being replaced you must first remove the old cable.

1. Disconnect all power as per Lock-Out/Tag-Out procedures as outlined in OSHA Section 1910.147.
2. Remove the Slip Ring Cover.
3. Mark existing cable connections.
4. Disconnect wires at the Slip Ring Brush Terminals.
5. Loosen the cable clamp and release the cable.
6. Loosen strain relief/watertight in the recessed Inlet Box on the spool.
7. Pull out and discard the old cable.

Cable Installation

1. Prepare the cable to be loaded onto the reel. Support the cable as shown, or lay the full length of cable out in the direction of travel. Make sure the cable will lay flat by removing any twist from the cable. All weld cable lead ends should be tinned for optimal performance. See **Figure 15-1**.
2. Insert the end of the cable to be connected to the slip ring through the guide arm and through the recessed inlet box on the spool. Pull enough cable through the inlet box and cable clamp to allow unstrained connections to the slip ring.
3. Unscrew the two parts of the strain relief/watertight and slide both sections and the neoprene grommet over the end of the cable as shown. Be sure to keep the fastening end last.

Cable Connections

1. Connect the cable to the Slip Ring terminals. Verify that the cable leads do not interfere with the free running of the slip ring brushes. For additional information on wiring see Slip Ring Installation & Replacement.
2. Secure the watertight connector. Jacketed cable should intrude 4-5 inches into the drum. Smaller watertights are secured using a Bridgeport sealing nut. See **Figure 15-2**.

Cable Loading

1. Wind the cable onto the spool by rotating the spool counterclockwise, as viewed from the slip ring cover.
2. Follow Spring Tensioning Procedure to adjust the spring tension as required by the application.
3. Verify all connections before initiating or restoring electrical power to the cable reel.
4. Visually inspect both reel and cable after initial electrification.

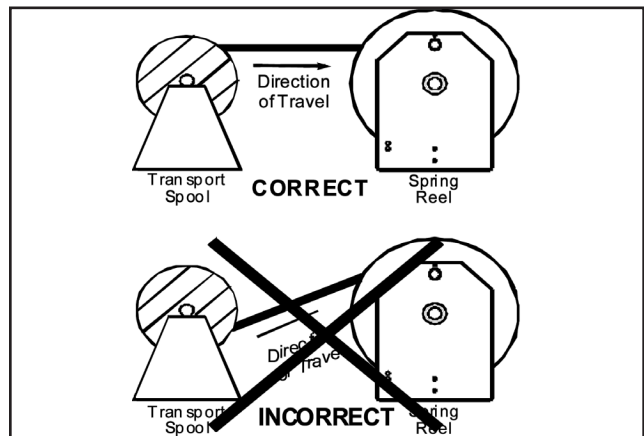


Figure 15-1

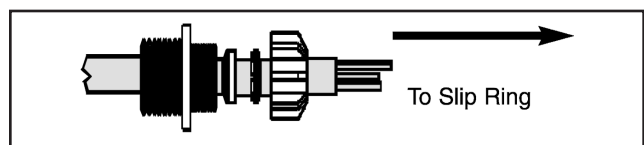


Figure 15-2

SECTION 3 - INSTALLATION

Slip Ring Replacement

1. Disconnect and secure the electrical power as per Lock-Out/ Tag-Out procedure outlined in OSHA 1910.147.
2. Remove the Slip Ring cover.
3. Disconnect the Spool Cable Connections from the Slip Ring Brush Terminals. Mark/Note the existing cable connections. See **Figure 16-1**.
4. Disconnect the Slip Ring Core Leads from the Junction Box terminals or, if there is no Junction Box, cut the wire as close as possible to the crimp connector. See **Figure 16-2**.
5. Loosen the two 1/4-20 Set Screws in the drive collar using a 1/8" Hex (Allen) Wrench.
6. Remove the Slip Ring from the end of the spool shaft.
7. After removing the Slip Ring use sand paper to remove the set screw burrs from the spool shaft. If the burrs are not removed the Slip Ring may not slide on the shaft.
8. Install the new Slip Ring on the shaft.
9. Be sure the hole in the Slip Ring Outboard Bearing closest to Brush #2 fits over the DrivePin. The Drive Pin must extend through the hole.
10. Secure Set Screws to 7 ft-lbs.
11. Connect the new Slip Ring to both the Spool Cable and Feeder Wire Connections.

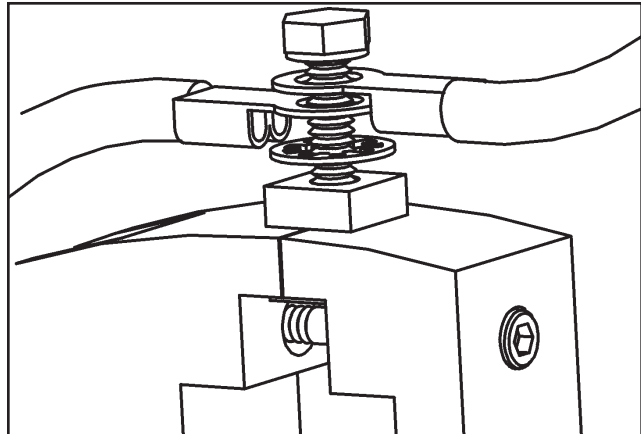


Figure 16-1

CAUTION: INCORRECT CONNECTION OF LEAD TERMINALS WILL RESULT IN UNIT FAILURE.

NOTE: Keep Spool Cable Connections Clear of Slip Ring Brushes!

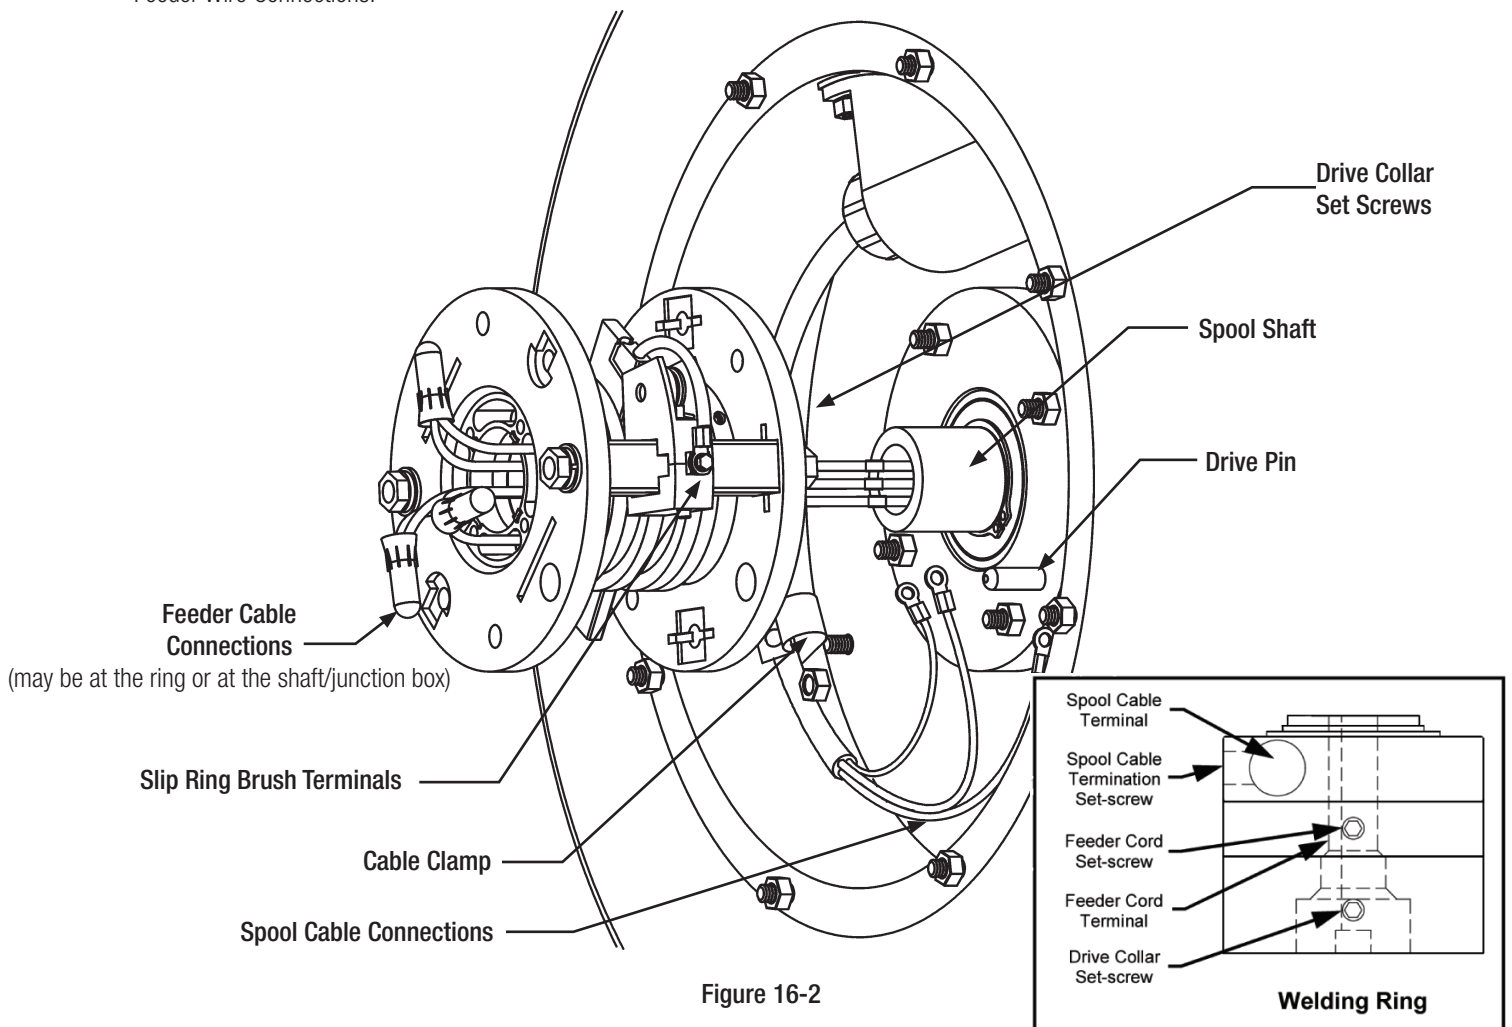


Figure 16-2

SECTION 3 - INSTALLATION

Electrical Connections

Electrical Warning

Electrical connections are determined by the requirements of the application and the configuration of the reel.

All electrical work should be performed by a qualified electrician.

Factory installed cable is wired with ring one (the ring closest to the drive collar) designated as ground, wired with the green cable conductor. See **Figure 17-1**.

A continuity check should be performed prior to energizing the reel to verify electrical connections.

Spool Cable Connections

See Cable Installation & Replacement Section for information on connecting the cable from the spool to the slip ring.

Supply Cable Connections

Reels without Junction Boxes

- Standard 1900 & 2400 Cable Reels do not have junction boxes for electrical connections.
- Reels without junction boxes are intended to have the supply cable attached by either conduit or water tight fitting installed into the 1" NPT internal threads at the end of the shaft.
- The nylon bushing in the end of the shaft is there to protect the wire leads from the threads in the shaft during shipping. THE NYLON BUSHING MUST BE REMOVED DURING INSTALLATION OF THE REEL.
- Supply cable connections are made either at the top of the slip ring or at the shaft entrance using crimp connections.
- Connections made at the slip ring require adequate clearance. After making all connections, wire leads should be bent to clear both the brush post screw thread and the inside of the slip ring cover. See **Figure 17-2**.

Reels with Junction Boxes

- NEMA 4 rated junction boxes are available for the 1900 & 2400 Series Cable Reels. Overall dimensions vary depending on AWG wire size and number of conductors and rating classification. See **Table 17-1**.
- Junction Box Terminals are numbered from the top down, left to right.
- Terminal 1 is designated as Ground.
- Slip Ring conductors are wired to the inside of the terminals.
- Torque terminal screws to 25-30 in-lbs.

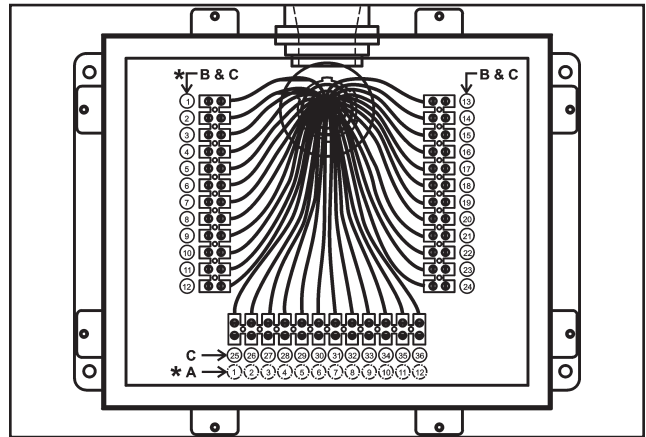


Figure 17-1 #1 Designated Ground

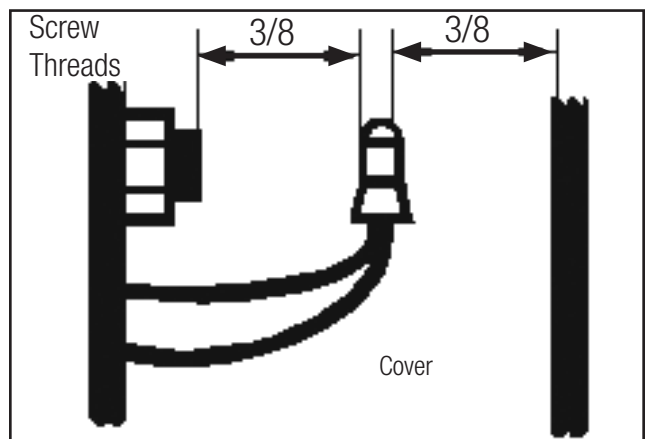


Figure 17-2

Junction Box Terminal Locations

A = 1-12 Conductors

B = 13-24 Conductors

C = 25-36 Conductors

Table 17-1

SECTION 3 - INSTALLATION

Spring Tension Adjustment

Spring Tension Warnings

More demanding applications may require spring tension adjustments for proper cable retraction.

WARNING: Do not allow cable to retract without restraining the retraction speed. Walk the cable back to the reel. The retraction speed should not exceed 150 ft/min.

Spring Cycling

The spring should be cycled after mounting but before terminating the free end to assure that the cable will retract properly and operate under the correct tension.

This is accomplished by pulling the cable out the required distance and allowing it to rewind. This procedure should be performed five to ten times. See **Figure 18-1**.

Spring Pre-Tensioning

The proper pre-tensioning required for effective operation varies by cable diameter and cable weight. Trial and error are the most effective means of setting the proper spring pre-tension. Pre-tensioning is achieved by pre-loading the spring with setup turns (reel revolutions). See **Figure 18-2**.

1. Relieve the spring of all tension before putting on setup turns. Grasp the end of the cable and the spool and rotate both spool and cable together in the payout direction until the spring engages.
2. Single Spring Motors (L, E, F) and Parallel Spring Motors (LP, EP, FP) require two setup turns. Series Spring Motors (LS, ES, FS) require four setup turns.
3. Next, feed the end of the cable through the roller guide (if present) and test the Spring Tension. Pull the cable out the required distance and allow it to rewind.

Adjusting Spring Tension

One additional setup turn may be added to provide increased tension if the total number of spool revolutions required to fully retract the cable plus the setup turns is less than the maximum number listed in the table below. One setup turn can be removed if the torque is too high. See **Figure 18-3**.

Do not add or remove setup turns on the reel after the cable has been terminated. The resulting twist may kink the cable and shorten cable life.

Secure the end of the cable using the appropriate terminals.

MAXIMUM USABLE SPRING TURNS	
Spring Motor	# Turns
E, EP, F, FP	15
L, LP	22
ES, FS	30
LS	44

Table 18-1

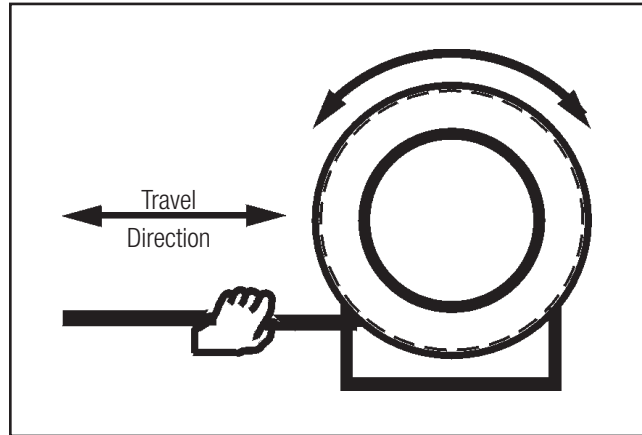


Figure 18-1 Viewing from Outer Flange

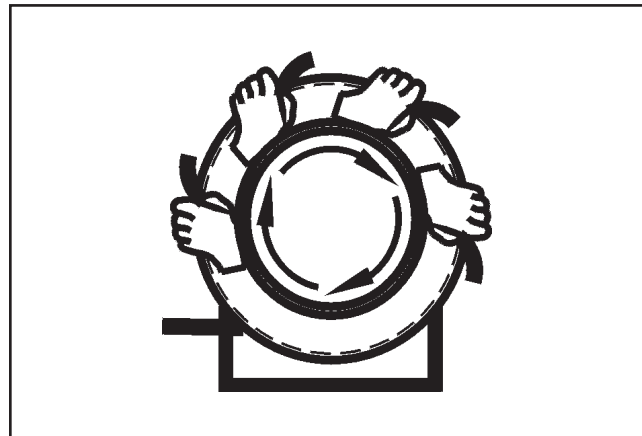


Figure 18-2 Viewing from Outer Flange

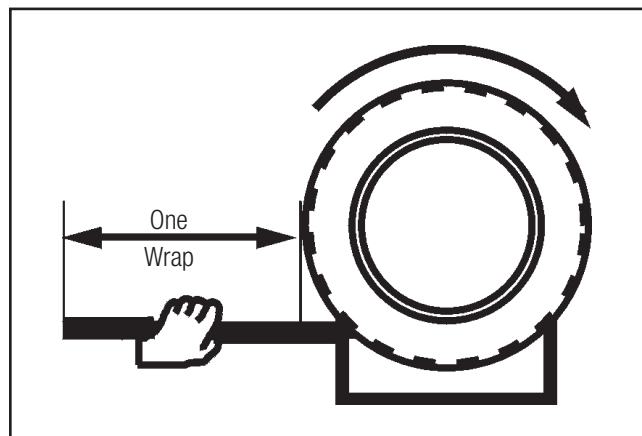


Figure 18-3 Viewing from Outer Flange

SECTION 4 - OPERATION

- Do not exceed the voltage or ampere rating of the reel. Overheating, fire, damage to equipment or personal injury could result. Do not allow cable to retract without restraining the retraction speed.
- Operate the reel within the cable size and length and spring tensioning limits for which it was intended.
- Two wraps of cable should remain on the reel at maximum extension to avoid excessive tension on the cable entrance watertight and slip ring terminations.
- The spring should not be wound to the last two turns at maximum payout. This prevents over-stressing the spring(s), thus reducing its life or damaging the reel.
- Keep the reel and cable clean to avoid excessive wear and damage.
- Arrange for maintenance service if damage is found on the cable or reel.
- To maximize spring life, cable should be fully retracted when not in use.

SECTION 5 - MAINTENANCE

Maintenance Warnings

Be sure the power is off for maintenance.

Follow lock-out/tag-out procedures as outlined in OSHA Section 1910.147.

Lubrication

All springs and bearings are lubricated for life at the factory. Additional lubrication should not be required.

Do not apply any lubricants or solvent cleaning agents to the slip ring, brush, or insulator surfaces.

Inspections

- Check the reel every 200-400 operating hours for any loose or missing fasteners. Tighten or replace as necessary.
- The slip ring assembly should be checked periodically as follows:
 1. Clean to remove any accumulated dust or dirt from the slip ring housing area.
 2. Check all brush and ring surfaces in the slip ring assembly and remove any accumulated dust.
 3. Brushes should be centered on the slip rings and brush springs should be seated in the slot on top of the brush. Terminal screw connections should be tight.
 4. Replace Brushes when the brush spring is within 0.093" of the ring insulator. See **Figure 20-1**.
 5. Inspect cable for damage or wear which would make it unsafe to use.

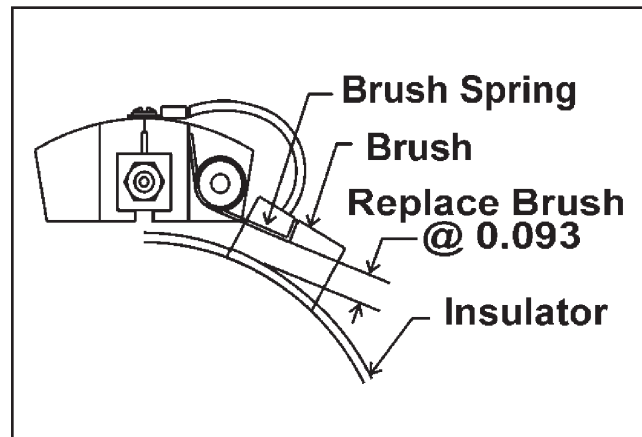


Figure 20-1

SECTION 5 - MAINTENANCE

Spring Motor Replacement

1. Disconnect Power (as per Lock-Out/ Tag-Out Procedures).
2. Some procedures may require mechanical assistance. The combined weight of the Cable, Spool, and Spring Motor may exceed 200 lbs.
3. Disconnect the terminated end of the cable. Wrap the cable onto the Reel Spool. Secure the cable on the spool using a zip-tie or similar fastener.
4. Make sure all spring tension is released and that the ratchet plate is free of the ratchet pawl.
5. Remove the Slip Ring Cover, Gasket, and Slip Ring as per Slip Ring Replacement Section. See **Figure 21-1**.
6. Remove any junction box, conduit connection or collar attached to the threaded end of the shaft.
7. Remove the service/feeder cable.
8. Remove the 1-1/2" Snap ring securing the Spool on the shaft. See **Figure 21-2**.
9. Loosen the 1/2-13 set screw in the Frame Hub using a 1/4 Hex (Allen) Wrench. See **Figure 21-4**.
10. The Spool and Spring Motor Assembly are removed by sliding the shaft out of the frame assembly.
11. Lay the Spool down with the Spring Motor Shaft pointing up.
12. Remove the eight 1/4-20 Keps Nuts that fasten the Spring Motor to the Spool. Remove the Ratchet Teeth, making note of their position(s) if present, and set aside. See **Figure 21-3**.
13. Mount the new Spring Motor to the Spool. See **Figure 21-3**.
14. Remount, making sure the hole in the shaft is aligned to the set screw hole in the frame hub. Torque the Spring Motor Nuts to 4 ft-lbs. Secure the 1/2-13 set screw in the Frame Hub to 28-35 ft-lbs using a 1/4 Hex (Allen) wrench. See **Figure 21-3**.
15. Reassemble.
16. Perform the Spring Tension Adjustment procedures.
17. Return the Reel to service.

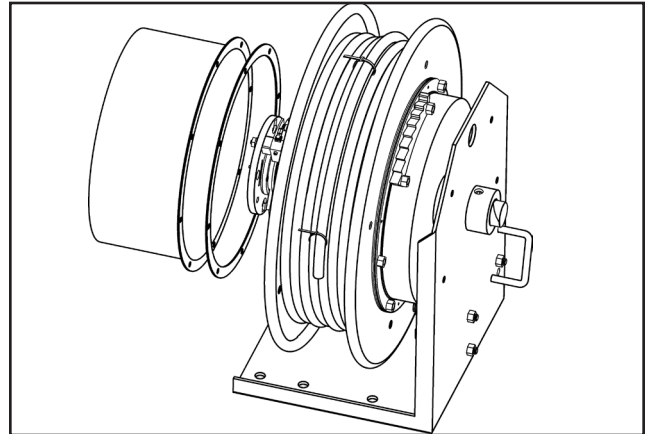


Figure 21-1

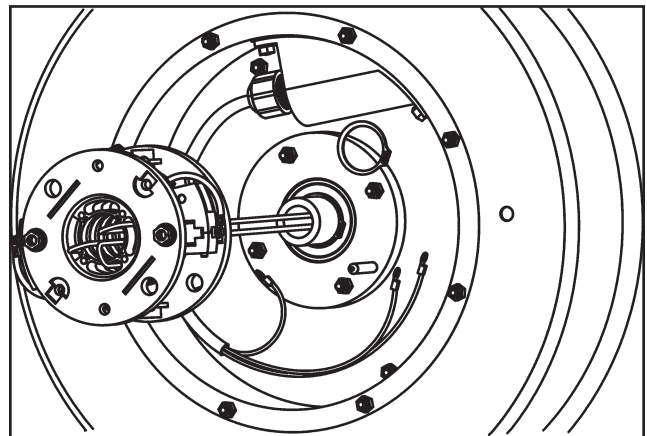


Figure 21-2

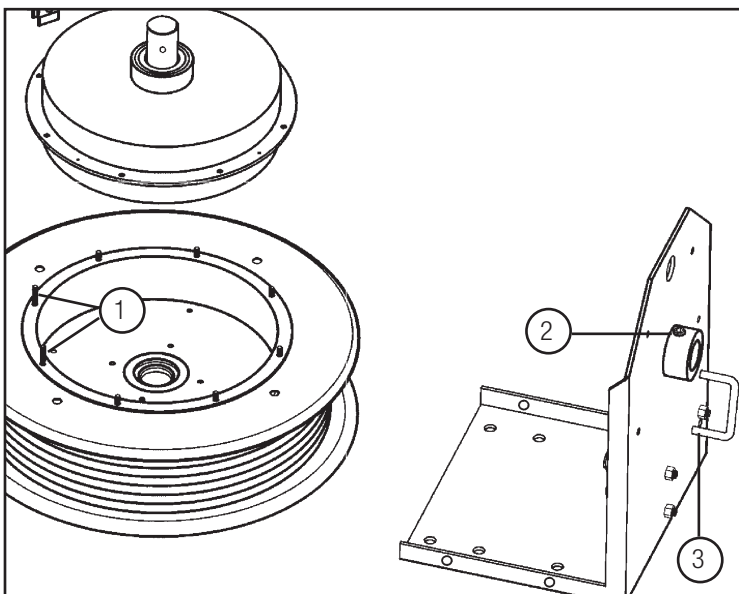


Figure 21-4

1. Ratchet Plate Studs (longer than others)
2. Frame Hub Set Screw
3. Spool Lock (optional)

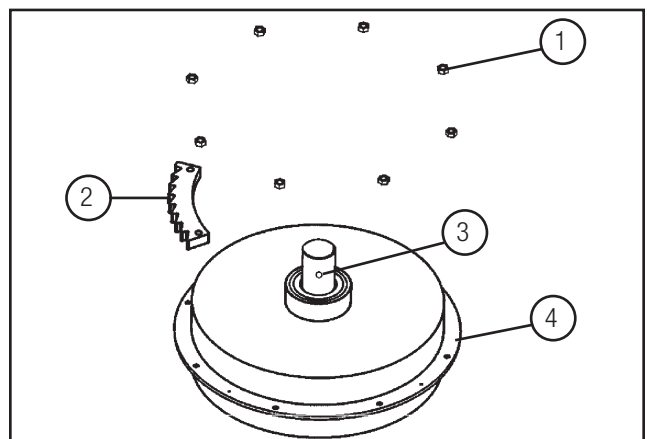


Figure 21-3

1. 1/4-20 Keps Nut
2. Ratchet Teeth (optional)
3. Set Screw Alignment Hole
4. Spring Motor

SECTION 6 - REPLACEMENT PARTS

R Series Slip Rings for 1900 & 2400 Series

To identify the slip ring in 1900 & 2400 Series reels for Replacement parts, it is necessary to precede the amperage profile section with the product code "RA-". This code specifies that the Slip Ring is a member of the R Series Slip Ring family and designates the bore size as 1.50".

Double Brushed

D

Number of Conductors

A

3*

Amperage ‡



②
①

Brushes			Brush Holders	
			Single	Double
30067A	A	= 6.5 AMP / 250 V	02800-P	02807-P
30066A	B	= 15 AMP / 250 V	02800-P	02807-P
30068A	C	= 35 AMP / 250 V	02801-P	02808-P
30068A	D	= 35 AMP / 600 V	02801-P	02808-P
30069A	E	= 75 AMP / 600 V	02802-P	02809-P
02840	F	= 110 AMP / 600 V	02803	02810
02841	G	= 150 AMP / 600 V	02804	02811
02842	H	= 225 AMP / 600 V	02805	02805
02843	J	= 300 AMP / 600 V	02806	02806

‡ Multiple Amperage Sections are possible.

* Consult the factory for Custom Application Part Numbers

§ Available for Special Applications

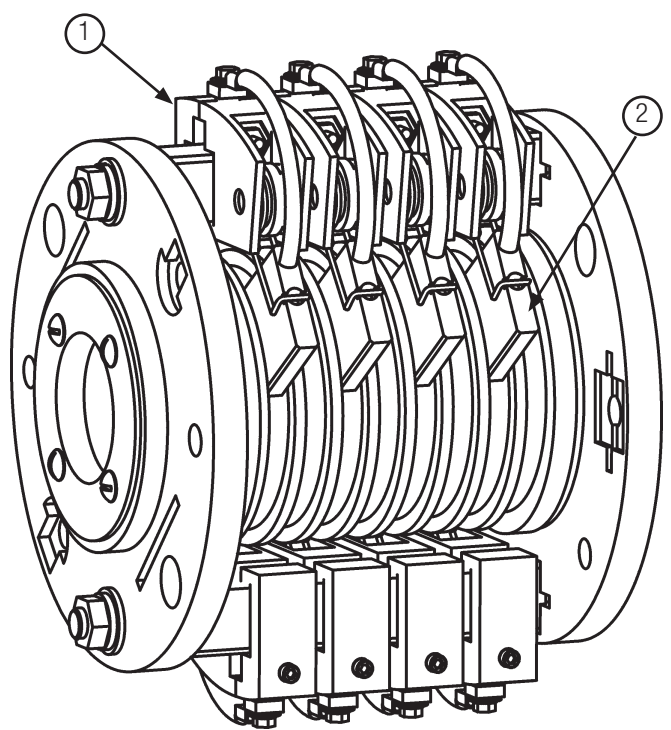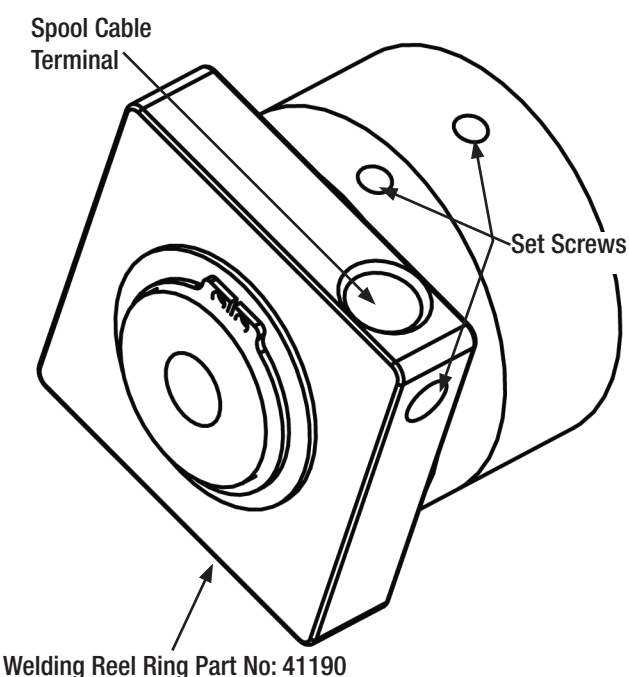


Typical R Series Slip Ring (in this example RA-C08)

SECTION 6 - REPLACEMENT PARTS

Reel Part Description

1900 & 2400 Series Cable Reel

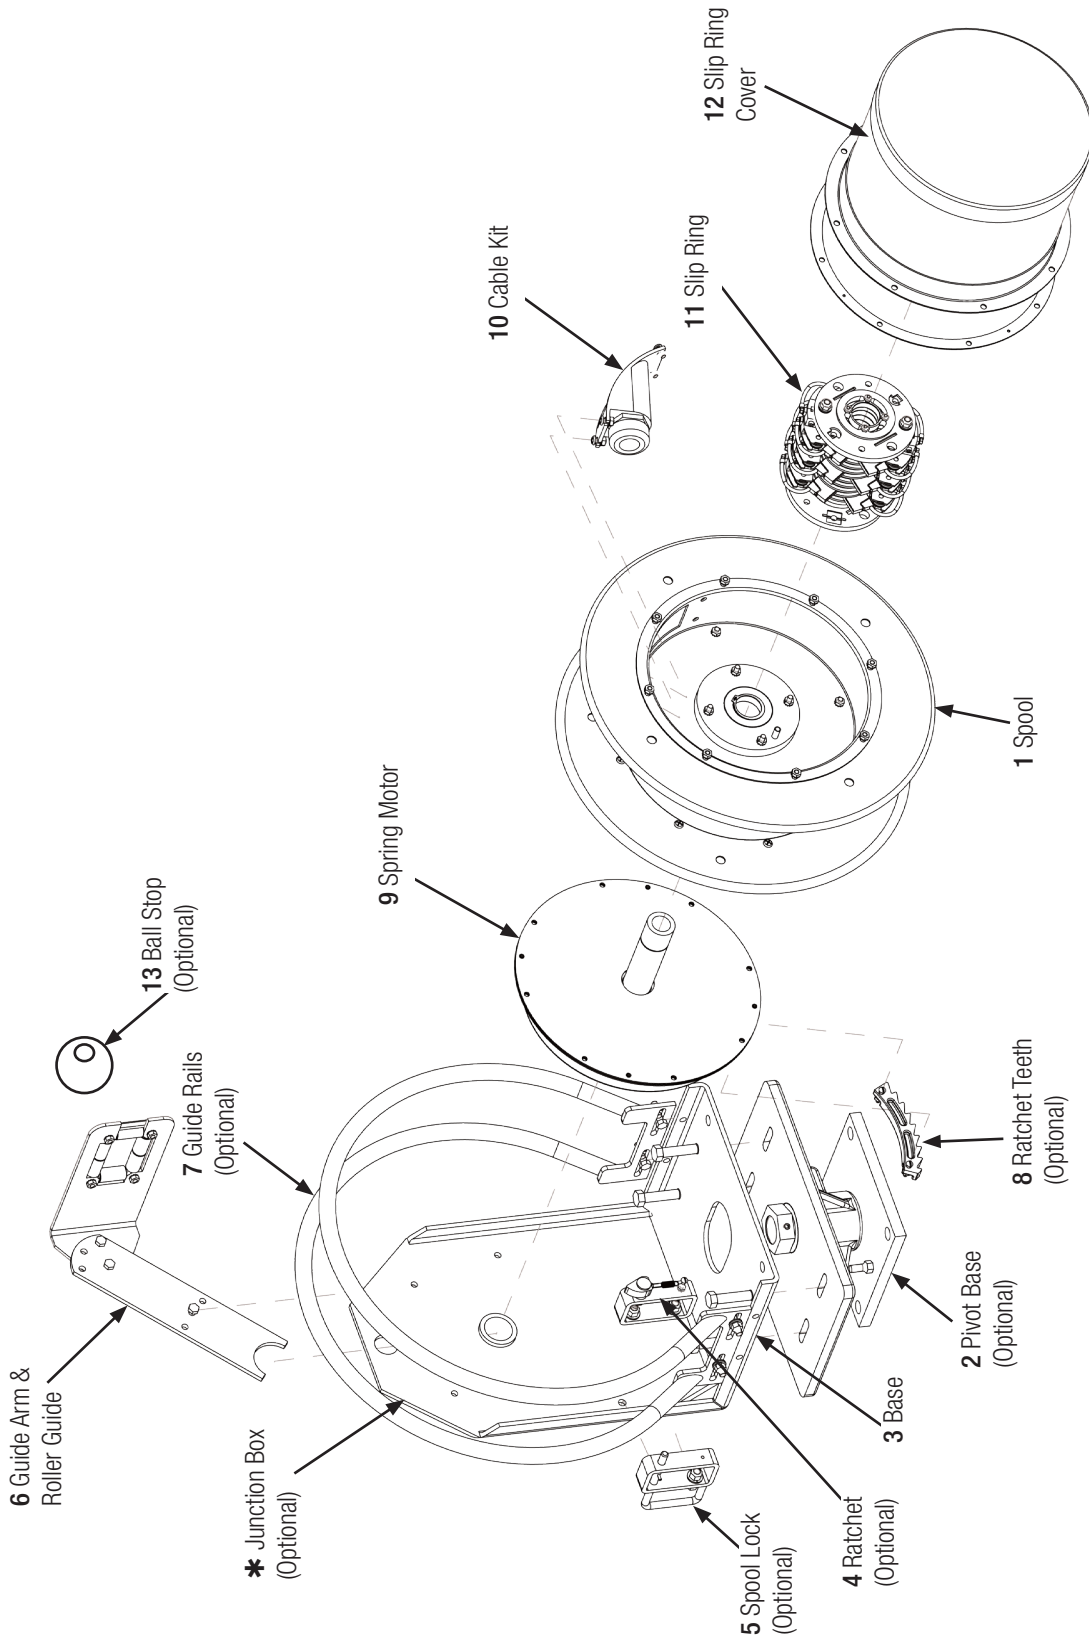

* Junction Box Not Shown

SECTION 6 - REPLACEMENT PARTS

Power Reel Part Descriptions

PowerReel Standard Parts - ie. 192121005011

1 **Spool Assembly**

Guide Rails	40212A	40212AA	40212B			40212BB			
Base Assembly	40200			40203					
Range Diameter	19.00			24.00					
Drum Diameter	12.00	12.00	17.00	18.50"	12.00	17.00	18.50	} 12N	
Drum Widths	5.10	7.70	5.10	5.10	5.10	7.70	7.70		
Spool Assy P/N	40252-K	40253-K	40254-K	40254A-K	40254B-K	40255-K	40255A-K		40255B-K
Letter Code	E	F	G	H	J	K	L		M

2 **Pivot Base**

40274

Series Designation

PR

P

E

ES

A

D

C

08

6 **Roller Guides**

Spool Assy	+	Spring Motor	=	Roller Guide #
E		E, ES, EP L, LS, LP		40258-K
G, H, J		E, ES, EP L, LS, LP		40258A-K
E		F, FS, FP		40258B-K
G, H, J		F, FS, FP		40258C-K
F		E, ES, EP L, LS, LP		40257-K
K, L, M		E, ES, EP L, LS, LP		40257A-K
F		F, FS, FP		40257B-K
K, L, M		F, FS, FP		40257C-K

10 **Cable Kits**

	A	B	C	D	E	F	G
P/N	101054-K	101055-K	101056-K	101057-K	101058-K	101059-K	101060-K
Length	0.31 - 0.56	0.50 - 0.75	0.70 - 0.95	0.875 - 1.00	1.065 - 1.20	1.156 - 1.31	1.281 - 1.53
Thread	1.00" NPT	1.00" NPT	1.00" NPT	1.25" NPT	1.25" NPT	1.50" NPT	1.50" NPT

11 **R Series Slip Ring Components**

P/N	Description			Volts
RA-D03-PR	35	Amp	3 Conductor	600
RA-D04-PR	35	Amp	4 Conductor	600
RA-C06-PR	35	Amp	6 Conductor	250
RA-C08-PR	35	Amp	8 Conductor	250
RA-C10-PR	35	Amp	10 Conductor	250
RA-C12-PR	35	Amp	12 Conductor	250
RA-C14-PR	35	Amp	14 Conductor	250
RA-C16-PR	35	Amp	16 Conductor	250
RA-C20-PR	35	Amp	20 Conductor	250
RA-C24-PR	35	Amp	24 Conductor	250
RA-C30-PR	35	Amp	30 Conductor	250
RA-E02-PR	75	Amp	2 Conductor	600
RA-E04-PR	75	Amp	4 Conductor	600
RA-F02-PR	110	Amp	2 Conductor	600
RA-F04-PR	110	Amp	4 Conductor	600
RA-G02-PR	150	Amp	2 Conductor	600
RA-G04-PR	150	Amp	4 Conductor	600

9 **Ratchets & Locks**

Spring Assembly	Ratchet Assembly	Spool Lock Assembly	Ratchet Teeth
L = 1 Spring = 40250-3K	40251A	40260A	40251C
LS = 2 / Series = 40249-3K			
LP = 2 / Parallel = 40248-3K			
E = 1 Spring = 40250-1K			
ES = 2 / Series = 40249-1K			
EP = 2 / Parallel = 40248-1K			
F = 1 Spring = 40277-K	40251B	40260B	
FS = 2 / Series = 40276-K			
FP = 2 / Parallel = 40275-K			

13 **Ball Stop**

533328-K

4 **Spring Assembly**

5 **Ratchet Assembly**

8 **Ratchet Teeth**

***** **Junction Box (Black)**

	1.00" NPT (0.31" - 0.95") O.D.	1.25" NPT (0.875" - 1.2") O.D.	1.5" NPT (1.156" - 1.5") O.D.
NEMA 4 with 4 Cond. 16-8 AWG	40923	-	-
NEMA 4 with 4 Cond. 6-2 AWG	-	40924	-
NEMA 4 with 12 Cond.	40925A	40925B	-
NEMA 4 with 24 Cond.	40926A	40926B	40926C
NEMA 4 with 30 Cond.	-	40927B	40927C

12 **Covers**

5.1 Drum (E, G, H, & J)	7.7 Drum (F, K, L, & M)	Cover #
	D03, D04, C06, E02	2.63" P/N 40231-K
	D03, D04, C06, C08, E02, E03, E04	5.25" P/N 40232-K
	C10, C12, C14, DA20, F02, G02	8.25" P/N 40267-K
	C16, C20, DA30, F03, F04, G04	10.50" P/N 40268-K
	C24	12.50" P/N 40269-K

SECTION 6 - REPLACEMENT PARTS

GafferReel Part Descriptions (Theatre)

GafferReel Standard Parts - ie. 192121005011B

1 **Spool Assembly**

Guide Rails	40212A-BLK	40212AA-BLK	40212B-BLK			40212BB-BLK		
7 Base Assembly	40200PB			40203PB				
Range Diameter	19.00			24.00				
3 Drum Diameter	12.00	12.00	17.00	18.50"	12.00	17.00	18.50	
Drum Widths	5.10	7.70	5.10	5.10	5.10	7.70	7.70	7.70
Spool Assy P/N	40252-BLK	40253-BLK	40254-BLK	40254A-BLK	40254B-BLK	40255-BLK	40255A-BLK	40255B-BLK
Letter Code	E	F	G	H	J	K	L	M

2 **Pivot Base**

40274

12N

Series Designation **GR** **P** **E** **ES** **A** **D** **D** **08**

6 **Roller Guides**

Spool Assy	+	Spring Motor	=	Roller Guide #
E		E, ES, EP L, LS, LP		40258-PB
G, H, J		E, ES, EP L, LS, LP		40258A-PB
E, G, H, J		F, FS, FP		40258C-PB
F		E, ES, EP L, LS, LP		40257-PB
K, L, M		E, ES, EP L, LS, LP		40257A-PB
F, K, L, M		F, FS, FP		40257C-PB

10 **Cable Kits**

A	101054-K	0.31 - 0.56	1.00" NPT	
B	101055-K	0.50 - 0.75	1.00" NPT	
C	101056-K	0.70 - 0.95	1.00" NPT	
D	101057-K	0.875 - 1.00	1.25" NPT	
E	101058-K	1.065 - 1.20	1.25" NPT	
F	101059-K	1.156 - 1.31	1.50" NPT	
G	101060-K	1.281 - 1.53	1.50" NPT	

11 **R Series Slip Ring Components**

P/N	Description	Volts
RA-D03-PR	35 Amp 3 Conductor	600
RA-D04-PR	35 Amp 4 Conductor	600
RA-D06-PR	35 Amp 6 Conductor	600
RA-D08-PR	35 Amp 8 Conductor	600
RA-D10-PR	35 Amp 10 Conductor	600
RA-D12-PR	35 Amp 12 Conductor	600
RA-D14-PR	35 Amp 14 Conductor	600
RA-D16-PR	35 Amp 16 Conductor	600
RA-D20-PR	35 Amp 20 Conductor	600
RA-D24-PR	35 Amp 24 Conductor	600
RA-D30-PR	35 Amp 30 Conductor	600
RA-E02-PR	75 Amp 2 Conductor	600
RA-E04-PR	75 Amp 4 Conductor	600
RA-F02-PR	110 Amp 2 Conductor	600
RA-F04-PR	110 Amp 4 Conductor	600
RA-G02-PR	150 Amp 2 Conductor	600
RA-G04-PR	150 Amp 4 Conductor	600

9 **4** **5** **8**

Ratchets & Locks

Spring Assembly		Ratchet Assembly	Spool Lock Assembly	Ratchet Teeth
L = 1 Spring	= 40250-3-BLK	40251A-K	40260A-K	40251C-K
LS = 2 / Series	= 40249-3-BLK			
LP = 2 / Parallel	= 40248-3-BLK			
E = 1 Spring	= 40250-1-BLK			
ES = 2 / Series	= 40249-1-BLK	40251B-K	40260B-K	
EP = 2 / Parallel	= 40248-1-BLK			
F = 1 Spring	= 40277-K			
FS = 2 / Series	= 40276-K			
FP = 2 / Parallel	= 40275-K			

***** **Junction Box (Black)**

	1.00" NPT (0.31" - 0.95") O.D.	1.25" NPT (0.875" - 1.2") O.D.	1.5" NPT (1.156" - 1.5") O.D.
NEMA 4 with 4 Cond. 16-8 AWG	40923	-	-
NEMA 4 with 4 Cond. 6-2 AWG	-	40924	-
NEMA 4 with 12 Cond.	40925A	40925B	-
NEMA 4 with 24 Cond.	40926A	40926B	40926C
NEMA 4 with 30 Cond.	-	40927B	40927C

12 **Covers**

5.1 Drum (E, G, H, & J)	7.7 Drum (F, K, L, & M)	Cover #
	D03, D04, E02	2.63" P/N 40231-PB
D03, D04, D05, E02, E03, E04	D05, D06, D07, D08, E03, E04, E05, F02, G02	5.25" P/N 40232-PB
D06, D07, D08, E05, F02, G02	D09, D10, F04, G04	8.25" P/N 40267-PB
D09, D10, D12, D14, F03, F04, G03, G04	D14, D16, F04, G04	10.50" P/N 40268-PB
D16	D20	12.50" P/N 40269-PB
	D24	16" P/N 42233-PB
D20	D30	18" P/N 45652-PB

SECTION 7 - TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Reel will not retract cable but has some tension.	<ol style="list-style-type: none"> 1) Improper pretension 2) Incorrect reel for application (lift vs. stretch). 3) Improper cable or cable length installed. 	<ol style="list-style-type: none"> 1) See Tension Adjustment section. 2) Quantify application vs. reel selection. 3) Install correct cable type and length.
Reel does not have spring tension.	<ol style="list-style-type: none"> 1) Broken spring. *Quantify application to prevent reoccurrence. 	<ol style="list-style-type: none"> 1) Replace spring motor.
Ratchet will not engage.	<ol style="list-style-type: none"> 1) Broken ratchet pawl spring. 	<ol style="list-style-type: none"> 1) Replace ratchet pawl spring.
Ratchet will not disengage.	<ol style="list-style-type: none"> 1) Over-extension of reel. 	<ol style="list-style-type: none"> 1) Manually rotate reel spool to disengage ratchet. To prevent lockup, two wraps of cable should remain on spool at all times.
Cable wraps improperly (uneven wrapping, wraps above or jumps flange).	<ol style="list-style-type: none"> 1) Reel mounting not level. 2) Cable retraction rate too high. 3) Cable guide out of adjustment. 	<ol style="list-style-type: none"> 1) Mount reel on level surface. 2) Maintain steady retraction rate. 3) Properly adjust cable guide.
Cable twisting or knotting.	<ol style="list-style-type: none"> 1) Improperly installed cable. 2) Cable rubbing on or bending around fixed object. 3) Excessive spring tension. 4) Inadequate anchoring of cable. 	<ol style="list-style-type: none"> 1) See Cable Install section on IOM. 2) Check roller guide for function and cable pay out path. 3) Quantify application vs. reel selection. Also check pretension. 4) Adjust anchoring method. ie. add strain relief.
Open or intermittent circuit.	<ol style="list-style-type: none"> 1) Inadequate connection. 2) Brush loses contact with slip ring. 3) Cable defective. 	<ol style="list-style-type: none"> 1) Check all termination points. 2) Check brush wear, spring tension & alignment. 3) Perform continuity check on cable.
Circuit trips and/or Pitted burned rings or brushes.	<ol style="list-style-type: none"> 1) Inadequate amp rating of reel. 	<ol style="list-style-type: none"> 1) Quantify application requirements vs. reel & cable rating.
Circuit arcing	<ol style="list-style-type: none"> 1) Amp or voltage above rating of reel. 2) Excessive carbon dust accumulation. 3) Water or moisture in slip ring. 	<ol style="list-style-type: none"> 1) Quantify application requirements vs. reel & cable rating. 2) Clean dust from inside slip ring. 3) Check gasket seal. 4) Replace brush spring.



www.conductix.us

USA / LATIN AMERICA

10102 F Street
Omaha, NE 68127

Customer Support
Phone +1-800-521-4888

Phone +1-402-339-9300
Fax +1-402-339-9627

info.us@conductix.com
latinamerica@conductix.com

CANADA

18450 J.A. Bombardier
Mirabel, QC J7J 0H5

Customer Support
Phone +1-800-667-2487

Phone +1-450-565-9900
Fax +1-450-851-8591

info.ca@conductix.com

MÉXICO

Calle Treviño 983-C
Zona Centro
Apodaca, NL México 66600

Customer Support
Phone (+52 81) 1090 9519
(+52 81) 1090 9025
(+52 81) 1090 9013

Fax (+52 81) 1090 9014

info.mx@conductix.com

BRAZIL

Rua Luiz Pionti, 110
Vila Progresso
Itu, São Paulo, Brasil
CEP: 13313-534

Customer Support
Phone (+55 11) 4813 7330

Fax (+55 11) 4813 7357

info.br@conductix.com

Contact USA for our Global Sales Offices

