

# SBP® Pendant Pushbutton Stations

## Installation Instructions



### Electromotive Systems

P.O. Box 13615  
Milwaukee, WI 53213-3615

Phone: 262/783-3500  
Fax: 262/783-3510

Toll free Phone (in USA): 800/288-8178  
Toll free Fax (in USA): 800/298-3503

Part Number: 005-1046  
#SBPINST-02  
©2002 Electromotive Systems



### Electromotive Systems

**This page intentionally left blank.**



## **WARNING**

- Do not operate SBP Pendant Pushbutton Station unless you are fully trained and qualified to operate the overhead material handling system of which this SBP is a component. For applications other than overhead cranes and hoists, consult Electromotive Systems at 1-800-288-8178.
- Read the entire contents of this manual before you install or use the SBP Pendant Pushbutton Station.



## **CAUTION**

Prior to installation, inspection, or repair of pendant station, disconnect power at source following lockout/ tagout procedures as outlined in ANSI Z244.1.

If the pendant cable grip is not properly sized to fit the pendant cable, contamination of the pendant housing is possible. Contaminants which enter the switch contacts may result in a potentially unsafe operating condition.

When cutting, stripping, and installing wires, ensure that contaminants do not fall into the enclosure. Contaminants which enter the switch contacts may result in a potentially unsafe operating condition.

Some pendant cable manufacturers add “talc” to their cable during the manufacturing process. This “talc” can migrate from the cable into the housing of the pendant station. As a result, contamination of switch contacts may occur resulting in a potentially unsafe operating condition. Electromotive Systems therefore recommends only the use of “talc” free cable for the wiring of all pendant stations.

Remove all contaminants from the housing and switch contact areas prior to sealing the enclosure and putting the pendant in service.

## Magnetek Limited Warranty

Magnetek, hereafter referred to as Company, guarantees all items manufactured by it against any defects of material and/or workmanship for a period of two years from the date of shipment. Company makes NO OTHER WARRANTY, EXPRESSED OR IMPLIED, AS TO THE MERCHANTABILITY OR FITNESS OF THE ITEMS FOR THEIR INTENDED USE OR AS TO THEIR PERFORMANCE. Any statement, description or specification in Company's literature is for the sole purpose of identification of items sold by the Company of any kind. Components and accessories not manufactured by Magnetek are not included in this warranty and are warranted separately by their respective manufacturers.

Company's sole liability shall be to repair at its factory, or replace any item returned to it within two years from date of shipment, which Company finds to contain defective material or workmanship. All items to be repaired or replaced shall be shipped to Company (Note: return authorization by Company is required.) within said two year period, freight prepaid, as a condition to repair or replace defective material or workmanship. Company's herein assumed responsibility does not cover defects resulting from improper installation, maintenance, or improper use. Any corrective maintenance performed by anyone other than Company during the warranty period shall void the warranty. Company shall not be liable for economic loss, property damage, or other consequential damages or physical injury sustained by the purchaser or by any third party as a result of the use of any Company supplied items or material.

Company neither assumes nor authorizes any other person to assume for Company any other liability in connection with the sale or use of items sold by Company.

List prices or discounts are subject to change without notice. Quoted prices will be honored for a period of 30 days from the date of the written quotation unless otherwise stated.

Orders of \$25,000 or more, and orders for special control panels are subject to special terms and conditions of sale. Refer to those specific sections within this document.

Orders are not subject to alteration or cancellation except upon written consent of Company and payment of proper cancellation charges, when deemed applicable by Company.

Materials or items may not be returned for credit, without the prior written consent of the Company. Any authorized return of materials or items shall be subject to a restocking charge equal to 25% of the net invoiced amount (\$100 minimum charge for all control products) after Company determines that the material or item is in resalable condition. If upon receipt of the material or items returned, the Company determines that said materials or items cannot be resold without alteration or service, the Company reserves the right to reject the returned materials or items and to send the same back to said purchaser at purchaser's expense.

## Installing and Wiring SBP Pendant Pushbutton Station

### Precautions at Installation

- Do not expose the unit to cold blasts of air that might cause condensation (e.g., air conditioning duct).
- Do not expose the unit to cleaning solvents that will penetrate and damage the unit's enclosure.
- Do not use cable which is split or cracked.
- Hang the pushbutton station when installing it. Do not place it on a horizontal surface (for example, on a stand or on the floor.)
- Attach the pushbutton station to the strain relief cable so that no tension is exerted on the pushbutton cable directly.



### DANGER

HIGH VOLTAGES ARE PRESENT IN THE CONTROL PANEL, JUNCTION BOXES, PENDANT'S ELECTRICAL COMPONENTS AND THE CONNECTION BETWEEN THESE COMPONENTS.

Before installing, servicing or inspecting any electrical or mechanical components of this power equipment, power must be disconnected at the source and proper lockout/tagout procedures followed.

DO NOT make or break electrical connections (for example, plugs and receptacles) without first disconnecting power at the source and following proper lockout/tagout procedures.

REFER TO ANSI Z244.1 PERSONNEL PROTECTION – LOCKOUT/TAGOUT OF ENERGY SOURCES.

Only qualified personnel should install components, inspect and/or service this equipment.

## Precautions at Wiring

- If the pendant top grommet does not fit the connecting cable properly, water or dust may penetrate through the entry gland depending on the operating environment and cause damage to the buttons or cause the crane or hoist to function improperly.
- When cutting or stripping wires, ensure that particles do not fall into that enclosure.
- Use a UL listed, round, crimp-style terminal when connecting the wiring terminal. Do not solder the terminal or connect the bare wires directly.

## Enclosure Disassembly

1. Remove the Top Cover by loosening its two screws.
2. Unscrew pendant cable grip nut.
3. Remove the Back Cover by loosening the assembly screws.

## Pendant Control Cable Installation

**Note:** *Electromotive Systems recommends the use of a suitable outdoor rated and oil resistant pendant cable that is both UL Listed and CSA recognized.*

*When cutting or stripping wires, ensure that particles do not fall into the enclosure.*

1. Remove the nylon cable grip clamp inside the top of the enclosure.
2. Feed the cable through the rubber nipple, cable entry gland and enclosure until the cable extends along the entire enclosure length. In some cases, it may be necessary to cut off part of the tapered cable entry gland to accommodate large diameter cable.
3. Strip back the cable outer jacket to within one inch of the top of the enclosure.
4. Cut, strip, and terminate each cable conductor.

**Note:** *Use a UL listed round, crimp style terminal when wiring the terminals. Do not solder the terminal or connect bare wires directly.*
5. Fasten each cable conductor to its respective terminal screw. (Refer to wiring and marking information on page 8 of this manual.)
6. Code the opposite ends of the cable conductors to ensure proper wiring.

## Accessories

Description	Catalog #
2 Position Selector Switch	SBPU-L2
3 Position Selector Switch N.C. in Center	SBPU-L3
3 Position Selector Switch N.O. in Center	SBPU-L3B
Key Switch - Key Removable in Off Position	SBPU-KS2
Key Switch-4 position selector, key removable in Off, N.C. in center	SBPU-KS4
120 Volt Red Pilot Light-Mounts in Standard Button Hole	SBPU-PLX-R
120 Volt Green Pilot Light-Mounts in Standard Button Hole	SBPU-PLX-G
120 Volt White Pilot Light-Mounts in Standard Button Hole	SBPU-PLX-W
120 Volt Yellow Pilot Light-Mounts in Standard Button Hole	SBPU-PLX-Y
120 Volt Red Pilot Light-Mounts in Upper Left Corner	SBPU-PL-120R
120 Volt Green Pilot Light-Mounts in Upper Left Corner	SBPU-PL-G
120 Volt White Pilot Light-Mounts in Upper Left Corner	SBPU-PL-W
120 Volt Yellow Pilot Light-Mounts in Upper Left Corner	SBPU-PL-Y
Momentary Button for Horn - Mounts in Upper Left Corner	SBPU-BZS

## Replacement Parts

Description	Catalog #
Single Speed 2-Button Switch	SBPU-A2
Single Speed 2-Button Switch (N.O./N.C. per button)	SBPU-AB2
Single Speed 2-Button Switch (Each button w/2 N.O. contacts)	SBPU-D2
Two-Speed 2-Button Switch	SBPU-S
Three-Speed 2-Button Switch	SBPU-T
Momentary On/Off 2-Button Switch	SBPU-B
Maintained On/Off 2-Button Switch	SBPU-H2
Maintained On/Off (N.O./N.C.) 2-Button Switch	SBPU-H3
Momentary Single Button Switch for horn (Mounts in button hole)	SBPU-ABZS
Button Cover - Black for Single-, Two, Three-Speed Switches	WC-LB
Button Cover - Red for On/Off Switches	WC-R
Button Cover - Green for On/Off Switches	WC-G
Button Cover - Black, High Ambient/Chemically/Resistant	WC-BF
Button Cover - Black, Low Ambient	WC-BS
Legend Sheet for Button Covers	004-1060
Lens, Acrylic for Button Covers	004-7051
2-Button Enclosure	SBP-E2
4-Button Enclosure	SBP-E4
6-Button Enclosure	SBPN-E6
8-Button Enclosure	SBPN-E8
10-Button Enclosure	SBP-E10
12-Button Enclosure	SBP-E12
Single Key for Key Switch	004-1032
Key Ring	009-4008
Dog Clip	009-4036
Thimble	003-2051
Eye Bolt	009-1404
Screws for Enclosure	009-4007
Hex Nut	009-9015
Pendant Warning Label	001-9999

## Enclosure Reassembly



***When tightening enclosure screws, do not exceed 9 inch pounds of torque. Overtorquing enclosure screws may cause damage to the enclosure.***

1. Ensure that there are no bare cable conductor strands and that all conductors are insulated from each other.
2. Make sure the enclosure water seal is properly placed in the groove of the front cover.
3. Reattach the back cover while carefully keeping the cable conductors inside the enclosure wiring area. Tighten the enclosure assembly screws.
4. Reinstall the top cover and tighten the assembly screws.
5. Apply a silicone bead at the top of the rubber cable entry neck where the cable emerges.
6. Slide down the rubber cable nipple firmly over the tapered cable entry gland to prevent water from running down the cable into the enclosure.
7. Wrap the rubber cable nipple with a tie-wrap for a watertight seal.

### Removing the Button Cover and Nameplate Insert

1. Using a small screwdriver, pry out the plastic Nameplate Insert.
2. Press one side of the Nameplate Insert into one side of the rubber Button Cover, and pry the Button Cover side to wedge in the plastic Nameplate Insert.
3. Remove the Button Cover (Boot) only after the enclosure is disassembled and the switch is removed from the enclosure. Then press out (using a small screwdriver), the Nylon Retaining Ring, which secures the Button Cover in the Enclosure hole.
4. Snap the Button Cover into the Enclosure hole from the front.

## Wiring and Repair

- Use a UL listed, round, crimp-style terminal when wiring the terminals. Do not solder the terminal or connect the bare wires directly.
- Replace the cable if it is cracked or split.
- When cutting or stripping wires, ensure that particles do not fall into the enclosure.

## Maintenance

- On a continual basis, ensure that the interlock mechanism is operating properly and that the buttons return to the off position when released.



### WARNING

- If cracks or other abnormalities are detected in any part, replace the part immediately. Failure to do so may cause the crane or hoist to function improperly.
- Replace a split or cracked enclosure, rain-proof button caps, cable armor, cable, or other parts immediately to prevent water from permeating the pushbutton enclosure which could cause an electrical shock or cause the crane or hoist to function improperly.


## Safe Crane Operating Practices

- When moving a load with the crane, stand facing the suspended load; move the load away from you.
- Perform only one operation at a time.
- When you are not using the pendant station, hang the unit as shown on page 7, do not let it lay horizontally.
- If a problem occurs during the operation of the pushbutton station, stop operation immediately and contact the person in charge of maintenance. Prior to inspection or repair of the pendant station, disconnect power at the source following lockout/tagout procedures as outline in ANSI ZZ44.1.
- Check the enclosure and insulating material for any damage.

## SBP® Series Pendant Pushbutton Stations - Parts List

	Description	Catalog #	
2-Button	2-Button On/Off	SBP-2-WB	
	2-Button All Single- Speed	SBP-2-WA	
	2-Button All Two-Speed	SBP-2-WS	
	2-Button All Three-Speed	SBP-2-WT	
4-Button	4-Button-(2) Single-Speed with On/Off	SBP-4-WB	
	4-Button-(2) Two-Speed with On/Off	SBP-4-WBS	
	4-Button- All Single-Speed	SBP-4-WA	
	4-Button- All Two-Speed	SBP-4-WS	
4-Button	4-Button- All Three-Speed	SBP-4-WT	
	6-Button	6-Button-(4) Single-Speed with On/Off	SBPN-6-WB
		6-Button-(4) Two-Speed with On/Off	SBPN-6-WBS
		6-Button-(4) Three-Speed with On/Off	SBPN-6-WBT
6-Button- All Single-Speed		SBPN-6-WA	
6-Button- All Two-Speed		SBPN-6-WS	
6-Button- All Three-Speed		SBPN-6-WT	
8-Button	8-Button-(6) Single-Speed with On/Off	SBPN-8-WB	
	8-Button-(6) Two-Speed with On/Off	SBPN-8-WBS	
	8-Button-(6) Three-Speed with On/Off	SBPN-8-WBT	
	8-Button- All Single-Speed	SBPN-8-WA	
	8-Button- All Two-Speed	SBPN-8-WS	
8-Button	8-Button- All Three-Speed	SBPN-8-WT	
	10-Button	10-Button-(8) Single-Speed with On/Off	SBP-10-WB
		10-Button-(8) Two-Speed with On/Off	SBP-10-WBS
		10-Button-(8) Three-Speed with On/Off	SBP-10-WBT
		10-Button- All Single-Speed	SBP-10-WA
10-Button- All Two-Speed		SBP-10-WS	
10-Button	10-Button- All Three-Speed	SBP-10-WT	
	12-Button	12-Button-(10) Single-Speed with On/Off	SBP-12-WB
		12-Button-(10) Two-Speed with On/Off	SBP-12-WBS
		12-Button-(10) Three-Speed with On/Off	SBP-12-WBT
		12-Button- All Single-Speed	SBP-12-WA
12-Button- All Two-Speed		SBP-12-WS	
12-Button- All Three-Speed		SBP-12-WT	

## Installation of Round Strain Cable

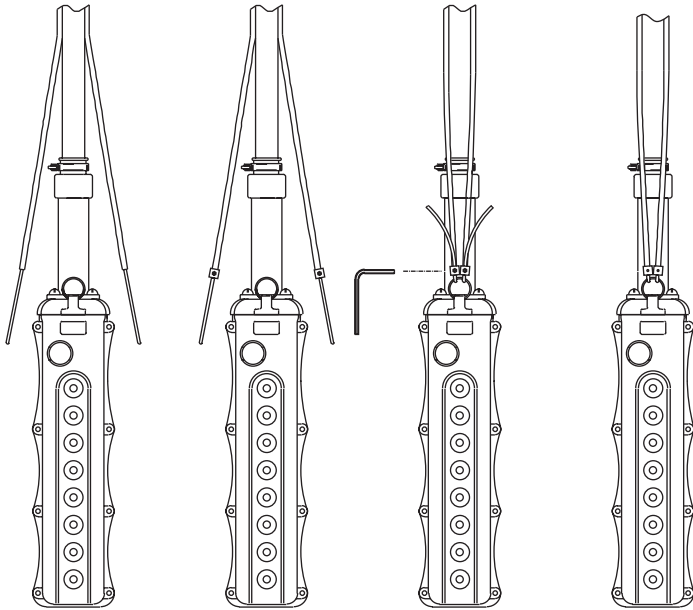

1. REMOVE INSULATION FROM STRAIN RELIEF CABLE
2. INSTALL STRAIN RELIEF COLLAR (W/ GRUB SCREWS)
3. THREAD STRAIN RELIEF WIRE THRU SPLIT RING AND BACK THRU COLLAR, TIGHTEN GRUB SCREW UNTIL SECURE.
4. TRIM OFF WIRE ENDS.

## Environment

- Do not expose the unit to cold blasts or air that might cause condensation (e.g. air conditioning duct).
- Do not expose the unit to cleaning solvents that will penetrate the unit's enclosure.

## General Handling

- Do not place the pendant in a pool of water, or immerse it in water.
- Do not let the pendant slam into a hard object, wall, etc.
- Do not attempt to turn knobs or switches beyond their travel limits.


## Operating SBP® Pendant Pushbutton Station Safely

When using a pendant station, take the following precautions:

### Pre-Operation Inspection


1. Ensure that the overall condition of the unit's exterior is sound.
2. Ensure that the buttons function normally (return to the off position when released) and are labeled properly for function.
3. Remove any dirt, sand, or moisture buildup.
4. Ensure the cable is not damaged.
5. Ensure that the strain relief wire supporting the cable is installed (if applicable).

The pendant station should be installed at a height of approximately 3'-6" from the ground, as shown below.

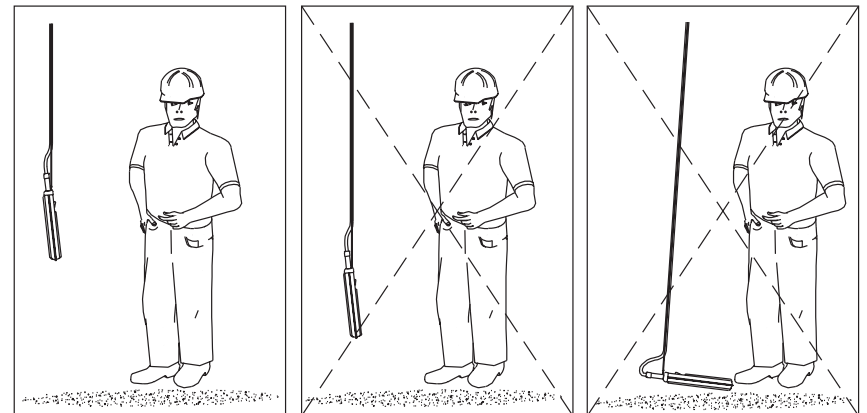

# Appendix A

## Typical SBP® Series Wiring and Marking Information

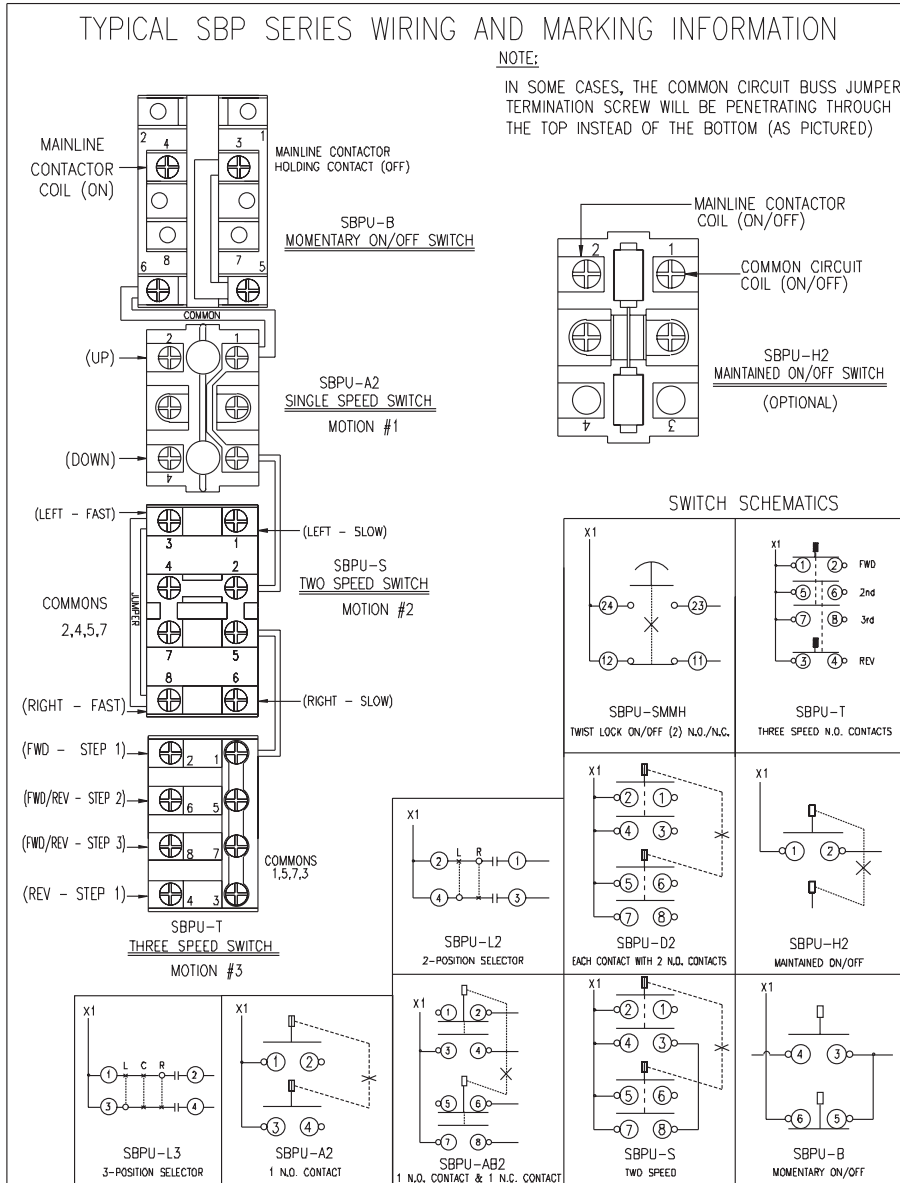

## Typical Installation of Strain Round Cable

