

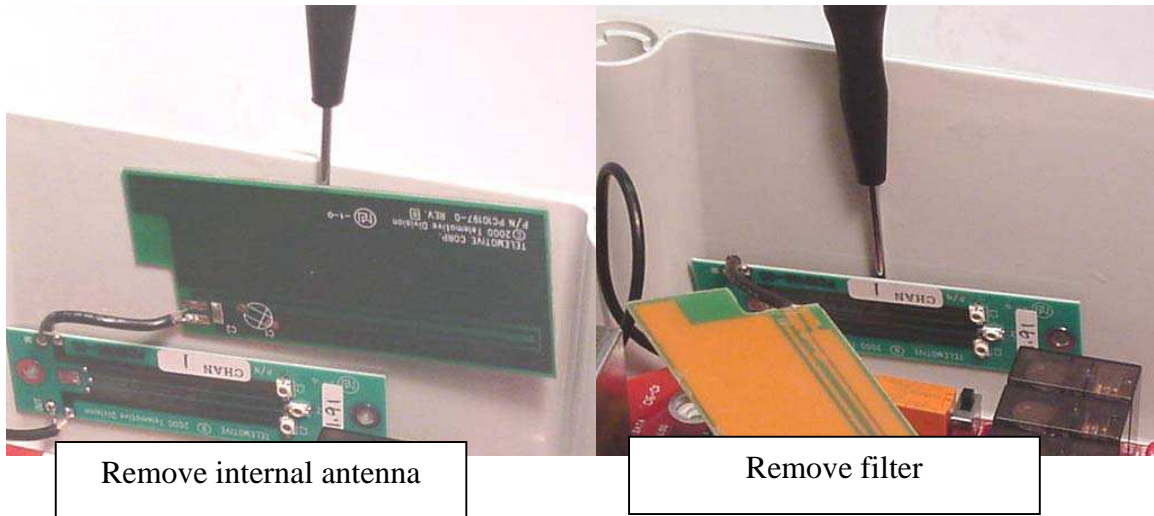
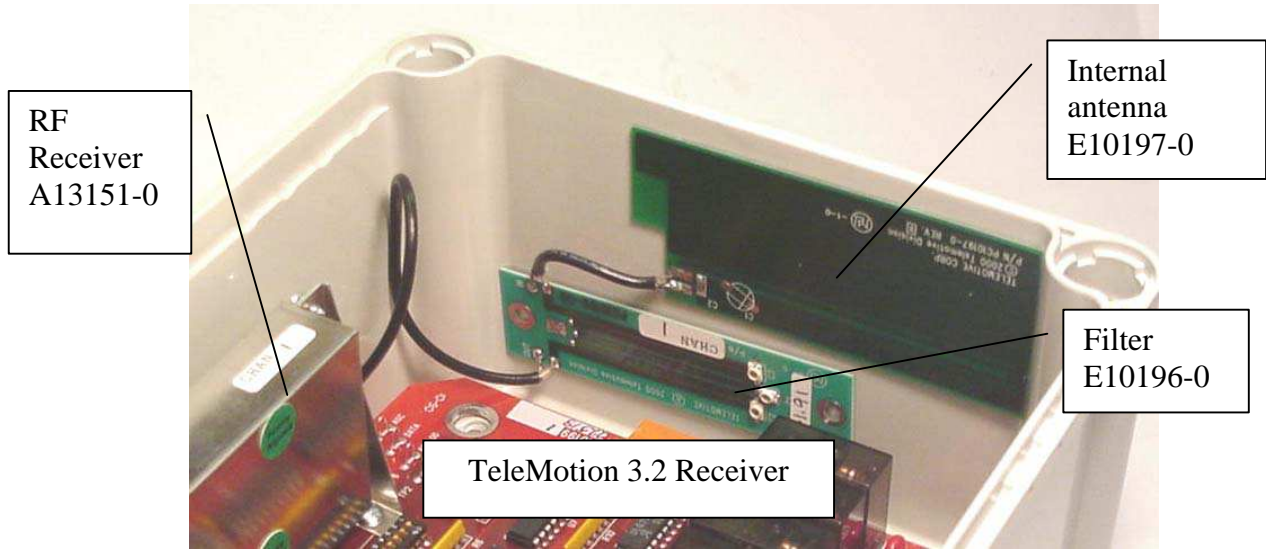


AN102-0 Remote Antenna Kit For TeleMotion 3.2 Installation Guide

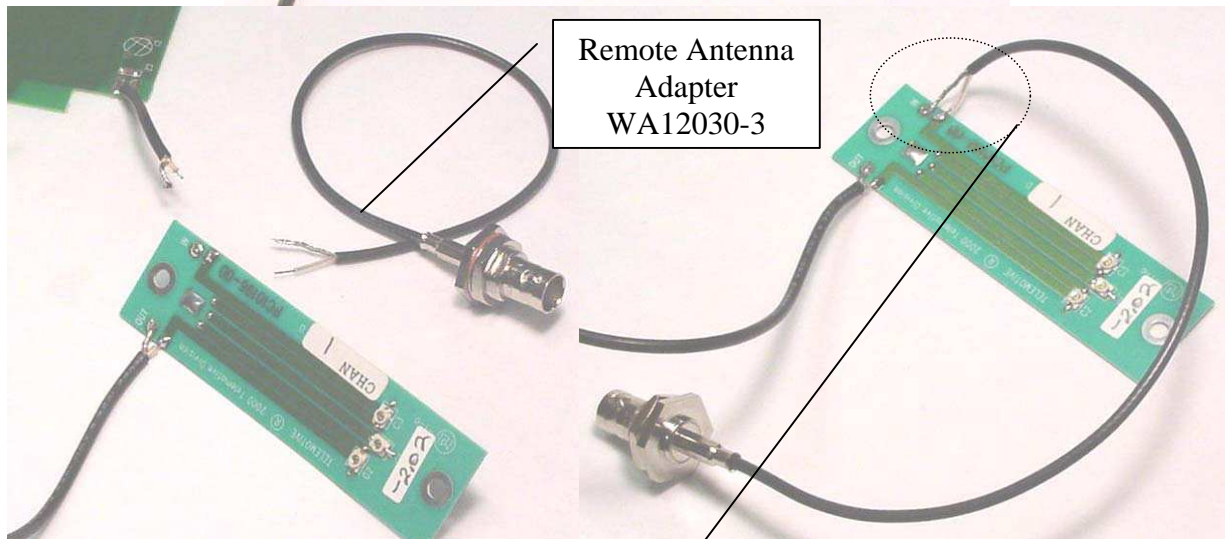


With a small blade screwdriver pry off above, units are held with double stick tape


AN102-0 Remote Antenna Kit For TeleMotion 3.2 Installation Guide (Continued).

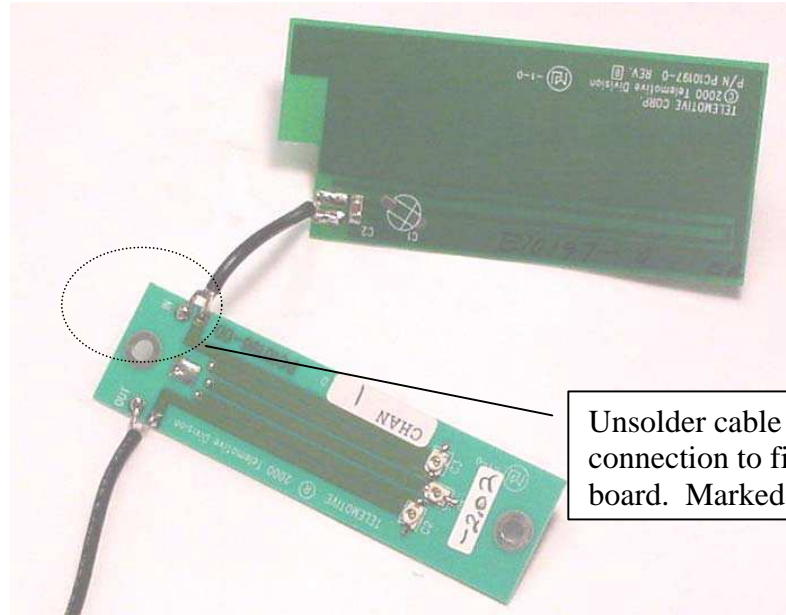

Solder Remote Antenna Adapter cable to filter cable connection point marked "IN". Note that shield braid goes closest to the word "IN". See diagram below.

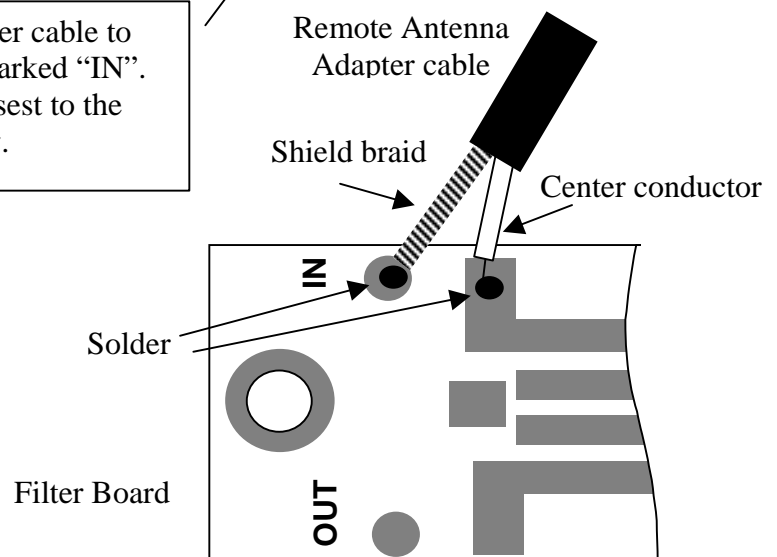

AN102-0 Remote Antenna Kit For TeleMotion 3.2 Installation Guide (Continued).

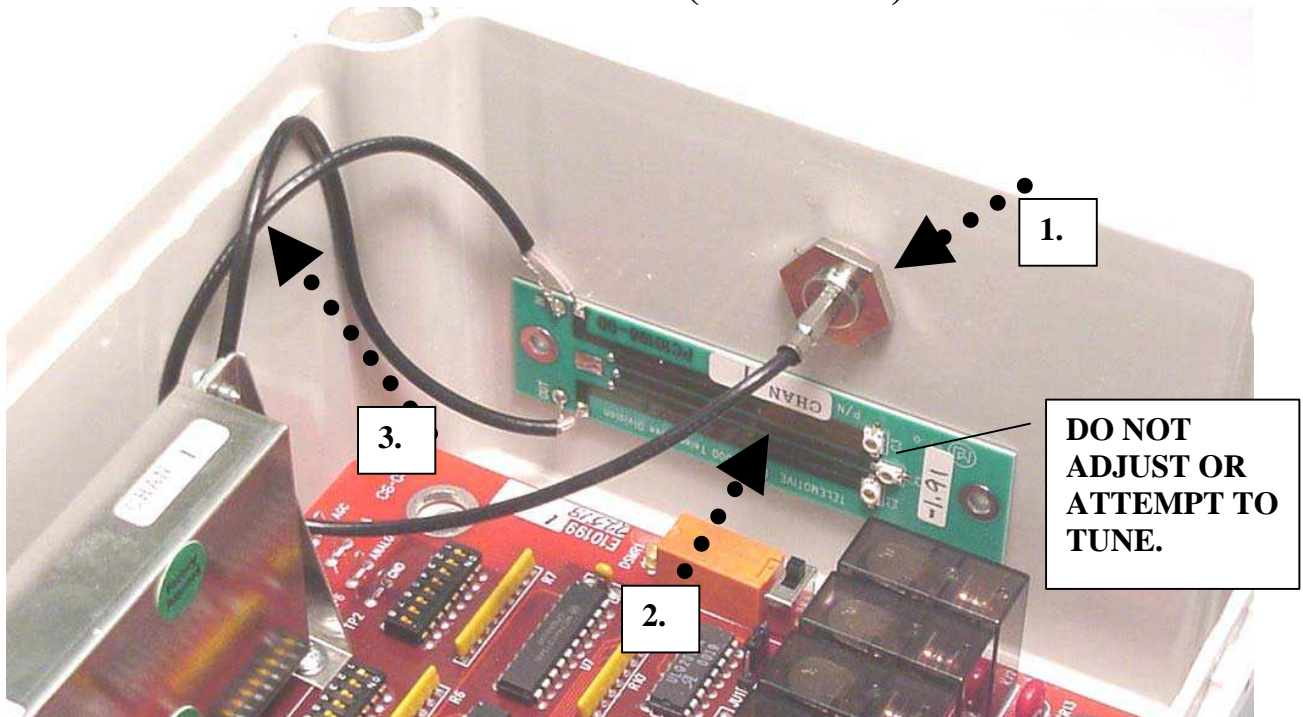

1. Drill ½" hole where needed.
Make sure cable is long enough to reach hole.
Try to keep as far away as possible from motor or power wiring.
Remove nut from antenna connector and insert antenna connector in hole.
2. Stick filter board back to top housing.
3. Dress wires as close to RF Receiver as possible and away from motor and power lines.

